



Philips LED  
FHD TV

**108 cm (43") TV**

Philips Smart TV  
Pixel Plus HD



**43PFS6808**

## The TV that loves to stream

FHD TV

Spend less time browsing and more time enjoying! This responsive smart TV will search all the big streaming services for you to quickly find what you're looking for or make suggestions. You get a sharp picture and voice control too.

**Looks great, whatever you watch or play.**

- Good for gaming. Low input lag on any console.
- Rich colours and smooth motion, for TV and more.

**Slim design. Responsible packaging.**

- Slim, attractive design.
- Packed for the future. Sustainable packaging and materials.

**FHD LED TV. Great value. Great performance.**

- Voice control. Works with Google Assistant\* and Alexa\*.
- Sharp picture. Vibrant viewing.
- Great TV. No fuss. Philips Smart TV.


# PHILIPS

FHD TV  
108 cm (43") TV Philips Smart TV, Pixel Plus HD

43PFS6808/62

# Highlights

## Sharp picture

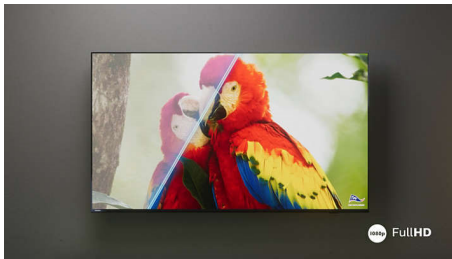


Love everything you watch on this Full HD LED TV. The TV's processing engine optimises picture quality to deliver sharp images, rich colours and smooth motion. You get the best possible viewing experience every time.

## Philips Smart TV



You'll find everything fast with our new smart TV. Enjoying a series? You can continue watching straight from the home screen. If you're looking for something new, you can browse categories like action or drama and see suggestions from the top streaming services — all in one place.

## Voice control

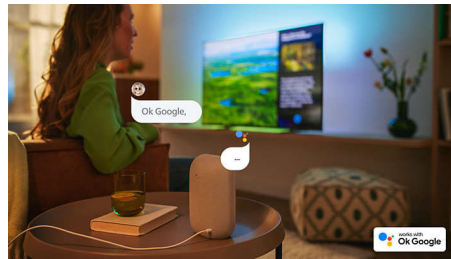

There's a choice of voice assistants! You can control the TV and ask Google Assistant to find shows and movies via Google smart speakers, or ask Alexa via Alexa-enabled devices.

## Sustainable packaging.

This TV isn't just an investment in great picture and sound — it's also an investment in the future. Our packaging uses FSC-certified recycled cardboard and our printed materials use recycled paper.

## Slim, attractive design.




Looking for a TV that fits with your room? The virtually bezel-free screen of this smart TV goes with just about any interior. The slim, light-grey feet make it seem as if the screen is floating.

## Rich colours and smooth motion.

Rich colours and smooth motion, for TV and more.

## Good for gaming

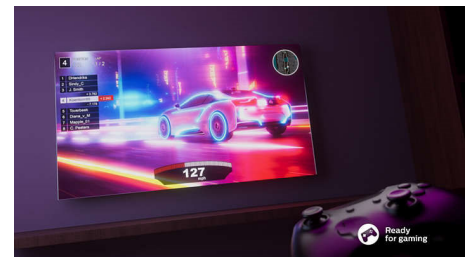

Enjoy gaming? A low input lag setting activates automatically when you turn on your console, giving you smooth play even when the action gets intense.

# Specifications

## Picture/Display

- Diagonal screen size (inch): 43 inch
- Diagonal screen size (metric): 108 cm
- Display: LED Full HD
- Panel resolution: 1920 x 1080
- Native refresh rate: 60 Hz
- Picture enhancement: HDR10, HLG (Hybrid Log Gamma)

## Display input resolution

- Resolution-Refresh rate: 576 p - 50 Hz, 640 x 480 - 60 Hz, 720 p - 50 Hz, 60 Hz, 1366 x 768 - 60 Hz, 1920 x 1080p - 24 Hz, 25 Hz, 30 Hz, , 50 Hz, 60 Hz

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- Video Playback: PAL, SECAM
- TV Programme guide\*: 8-day Electronic Programme Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

## Smart TV

- OS: Smart TV with improved OS

## Smart TV Features

- User Interaction: SimplyShare, Screen mirroring
- Interactive TV: HbbTV
- SmartTV apps\*: YouTube, Philips store, Amazon Prime video, Netflix
- Voice assistant\*: Works with Alexa, Works with Google Assistant

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, VP9, HEVC (H.265), AV1
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10), FLAC
- Subtitles Formats Support: .SMI, .SRT, .SSA, .SUB, .TXT, .ASS
- Picture Playback Formats: JPEG, BMP, GIF, PNG, HEIF

## Processing

- Processing Power: Dual Core

## Sound

- Output power (RMS): 16 W
- Speaker configuration: 2 x 8 W full-range speaker
- Codec: Dolby Digital MS12 V2.5
- Sound Enhancement: A.I. Sound, Clear Dialogue, Dolby Atmos®, Dolby Bass Enhancement, Dolby Volume Leveller, Night mode, A.I. EQ

## Connectivity

- Number of HDMI connections: 3
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 2
- Wireless connection: Wi-Fi 802.11n, 2 x 2, Single band
- Other connections: Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical), Headphone out, Service connector, Satellite Connector
- HDCP 2.3: Yes on all HDMI
- HDMI ARC: Yes on HDMI1
- EasyLink 2.0: HDMI-CEC for Philips TV/SB

## Supported HDMI video features

- HDR: HDR10, HLG

## EU Energy card

- EPREL registration numbers: 1423321
- Energy class for SDR: D
- On mode power demand for SDR: 33 kWh/1000h
- Energy class for HDR: G
- On mode power demand for HDR: 63 kWh/1000h
- Off mode power consumption: n.a.
- Networked standby mode: 2.0 W
- Panel technology used: LED LCD

## Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Standby power consumption: <0.3W
- Power Saving Features: Auto switch-off timer, Picture mute (for radio), Eco mode, Light sensor
- Off mode power consumption: N/A

## Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Tabletop stand, Power cord, Quick start guide, Legal and safety brochure

## Design


- Colours of TV: Satin chrome bezel
- Stand design: Satin chrome sticks

## Dimensions


- Set Width: 956.0 mm
- Set Height: 566.0 mm
- Set Depth: 87.0 mm
- Product weight: 6.3 kg
- Set width (with stand): 956.0 mm
- Set height (with stand): 586.0 mm
- Set depth (with stand): 224.0 mm
- Product weight (+stand): 6.5 kg
- Box width: 1100.0 mm
- Box height: 680.0 mm
- Box depth: 140.0 mm
- Weight incl. Packaging: 9.0 kg
- Stand width: 756.0 mm
- Stand height: 20.0 mm
- Stand depth: 224.0 mm
- Distance between 2 stands: 756.0 mm
- Stand height to TV bottom edge: 20.0 mm
- Wall-mount compatible: 100 x 100 mm

## Connections

### Side

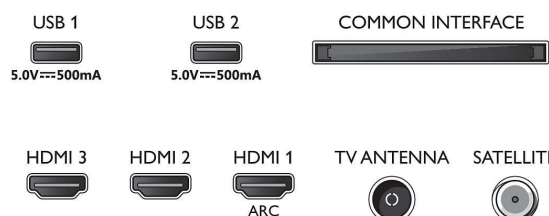

### Rear

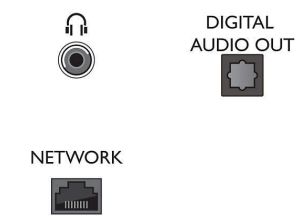

Issue date 2023-09-11

Version: 2.2.1

EAN: 87 18863 03729 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)



- \* EPG and actual visibility (up to 8 days) is country- and operator-dependent.
- \* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.
- \* Philips TV Remote app and related functionalities vary per TV model, operator and country, as well as smart device model and OS. For more details please visit: [www.philips.com/TVRemoteapp](http://www.philips.com/TVRemoteapp).
- \* Google Assistant is available in selected languages and countries. The list of supported countries and languages will be expanded over time. For the latest information, please contact our customer care.
- \* Smart TV app availability varies per TV model and country. For more details please visit: [www.philips.com/smarttv](http://www.philips.com/smarttv).
- \* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.
- \* Amazon Prime is available in selected languages and countries.
- \* Netflix subscription required. Subject to terms on <https://www.netflix.com>
- \* Rakuten TV is available in selected languages and countries.