



Philips ColorVision  
Yellow car headlight bulb

Type of lamp: H7

Pack of: 2  
12 V, 55 W



12972CVPYS2

## Restyle with light

Add a touch of color

ColorVision adds a touch of color to your car optics in blue, green, yellow or purple. These innovative colored car bulbs are certified road legal, so you can customize your ride while still projecting safe white light.

### Color customization for your car

- Color your lights in blue, green, yellow or purple
- Available in most popular automotive lamp types: H4 and H7
- Designed for reflector optics for color customization

### Designed to see

- Colored car lamps that are certified road legal
- Light up the road with 60% more white light
- React faster with more light

### Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

# PHILIPS

Yellow car headlight bulb  
Type of lamp: H7 Pack of: 2, 12 V,55 W

12972CVPYS2

# Highlights

Available in H4 and H7



To find out which Philips ColorVision lamp fits your car, go to [www.philips.com/automotive](http://www.philips.com/automotive)

Color your lights



Philips ColorVision allows to add a personalized touch of color to your car optics. Choose from blue, green, yellow or purple and customize your ride.

Road legal colored car lamps



ColorVision lamps comply with all ECE regulations and come with a certification card to prove they are road legal. Keep it with you in your car at all times.

React faster with more light

Increased visibility is proven to help you react faster while driving. With whiter light and up to 60% more vision, ColorVision increases your visibility compared to standard lamps.

Anticipate easier to any obstacles that might come your way.

Designed for reflector optics



Philips ColorVision creates colored effects by reflecting light into the lamp optics. Switch on your headlamps and light up with a touch of color

60% more white light



Thanks to its technology, Philips ColorVision lights up the road with 60% more white light than any other standard lamp. So you see the road ahead more clearly, while your optics add a touch of color

Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry,


introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Resistance against humidity

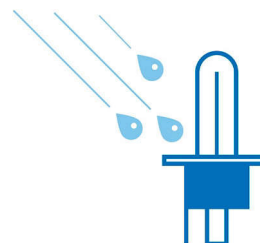

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

# Specifications

## Marketing specifications

- Expected benefits: Style
- Product highlight: Add a touch of colour

## Product description

- Application: High beam, Low beam
- Base: PX26d
- Designation: H7 ColorVision
- Homologation ECE
- Range: ColorVision
- Technology: Halogen
- Type: H7

## Lifetime

- Life time: Up to 400h

## Light characteristics

- Lumens: 1500 +/-10% lm
- Color temperature: 3350 K

## Electrical characteristics

- Wattage: 55 W
- Voltage: 12 V

## Ordering information

- Order entry: 12972CVPYS2
- Ordering code: 36802428

## Packaging Data

- Packaging type: S2
- EAN1: 8727900368024
- EAN3: 8727900368031

## Packed product information

- Width: 4.7 cm
- Height: 12.8 cm
- Length: 11 cm
- Pack Quantity: 2
- MOQ (for professionals): 10

## Outerpack information

- Length: 29 cm
- Width: 12 cm
- Height: 13.6 cm
- Gross weight per piece: 0.427 kg



Issue date 2023-09-14

Version: 9.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)