



Philips Vision Moto
Motorcycle headlights

Type of lamp: S2

Pack of: 1
12 V,35/35 W

12728C1

Feel safe, ride safe

Up to 30% more vision

Producing up to 30% more vision than a standard lamp, Vision Moto headlamps allow motorcycle riders to see farther with improved light beam performance at a very competitive price. For greater safety, choose Vision Moto bulbs!

State-of-the-art technology

- Respecting high quality standards of the ECE homologation
- Philips is the choice of major motorbike manufacturers.

The most economical choice

- 30% more vision
- The best value choice

30% more vision than a standard lamp

- Philips moto lamps are made of high-quality quartz glass

PHILIPS

Motorcycle headlights
Type of lamp: S2 Pack of: 1, 12 V,35/35 W

Highlights

Best value




The Philips Vision Moto lamps are the best choice for drivers looking for economical lamp solutions and not willing to compromise on security. The motorcycle bulbs offer 30% more vision on the road than a standard lamp.

ECE homologation

Philips Automotive is dedicated to producing best-in-class products and services in the Original Equipment Manufacturer market as well as in aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to maximize the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements.

Greater light-beam projection

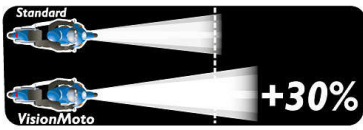

Offering 30% more vision on the road, Philips VisionMoto headlamps are the perfect choice for

motorcycle riders seeking for light performance and safety. With better light output, riders can react faster to obstacles and avoid accidents.

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

Manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

12728C1

Specifications

Marketing specifications

- Expected benefits: More light
- Product highlight: Up to 30% more vision

Product description

- Application: High beam, Low beam
- Base: BA20d
- Designation: S2 Vision Moto
- Range: Vision Moto
- Technology: Halogen
- Type: S2

Lifetime

- Lifespan: Up to 400h

Light characteristics

- Lumens: 825 ±15%

Electrical characteristics

- Wattage: 35/35 W
- Voltage: 12 V

Ordering information

- Order entry: 12728C1
- Ordering code: 77359330

Packaging Data

- Packaging type: C1
- EAN1: 8711500773593
- EAN3: 8711500779342

Packed product information

- Gross weight per piece: 211.67 g
- Length: 4.55 cm
- Width: 4.55 cm
- Height: 7.6 cm
- Pack Quantity / MOQ: 10

Outerpack information

- Length: 23.8 cm
- Width: 9.3 cm
- Height: 7.8 cm
- Gross weight per piece: 211 g



Issue date 2023-09-14

Version: 9.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com