



Philips Vision  
car headlight bulb

H3  
55 W  
12 V  
Style

12336PRB1

## Safety you can see

Up to 30% more vision on the road

Producing up to 30% more vision,\* Philips Vision headlights deliver a longer light-beam projections for increased safety and comfort. \*Compared to standard minimum legal requirements in low beam tests results.

### Very high quality and ultra resistant car lamp

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity

### A better performance than a standard car head lamp

- Up to 30% more vision on the road\*

### Original Equipment manufacturer


- Philips is the choice of major car manufacturers

# PHILIPS

car headlight bulb  
H3 55 W, 12 V, Style

# Highlights

## Greater safety and comfort

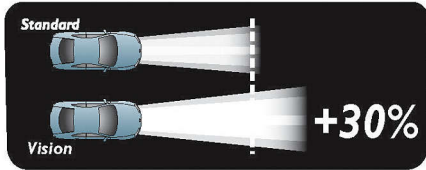

Our Vision upgrade headlight bulbs produce a longer light-beam projection for greater safety and comfort.

## Car manufacturer choice




For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

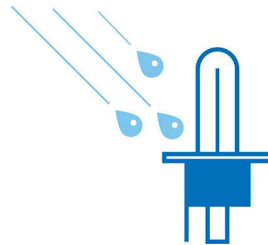

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

12336PRB1

# Specifications

## Marketing specifications

- Expected benefits: More light

## Product description

- Application: High beam
- Base: PK22s
- Designation: H3 Vision
- Homologation ECE
- Range: Vision
- Technology: Halogen
- Type: H3

## Lifetime

- Life time: 400h

## Light characteristics

- Lumens: 1450 lm
- Color temperature: Up to 3200 K

## Electrical characteristics

- Wattage: 55 W
- Voltage: 12 V

## Ordering information

- Order entry: 12336PRB1
- Ordering code: 69561130

## Packaging Data

- Packaging type: B1
- EAN1: 8711500695611
- EAN3: 8711500695628

## Packed product information

- Width: 9.5 cm
- Height: 13.5 cm
- Net weight per piece: 7 g
- Gross weight per piece: 20 g
- Length: 2.348 cm
- Pack Quantity / MOQ: 10
- Pack Quantity: 1
- MOQ (for professionals): 10

## Outerpack information

- Length: 19.5 cm
- Width: 15.3 cm
- Height: 11 cm
- Gross weight per piece: 0.2 kg



Issue date 2023-09-14

Version: 10.0.3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)