




Philips X-tremeVision
car headlight bulb

Type of lamp: H7

Pack of: 1
12 V, 55 W
More light

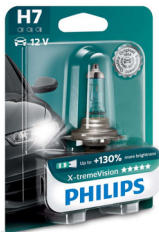

12972XV+B1

Take performance to the X-treme

Up to 130% brighter light

Philips X-tremeVision car bulbs are among the brightest you can buy. They outshine most other car lamps with up to 130% more brightness and a superior beam length. So you see further, react faster and drive safer.

Increased brightness

- Exceptional beam quality and performance
- Great contrast for a comfortable drive
- Significantly whiter light to improve comfort and safety

High amount of light, high performance

- One of the brightest bulbs: ultimate light performance
- The safest, road-legal headlights
- See further and react faster with up to 130% more brightness

Best-in-class lifetime

- A lifetime of safety so you can see and be seen
- Performance means more light and longer lifetime

PHILIPS

car headlight bulb
Type of lamp: H7 Pack of: 1, 12 V, 55 W, More light

Highlights

Significantly whiter light

The bright white light (up to 3.500 K) is significantly whiter than standard headlamps. The Philips patented gradient coating technologyTM produces a more powerful light. So you can enjoy one of the brightest lighting performances and a highly comfortable

A lifetime of safety



Every potential failure of a spare part is a risk for you and your vehicle. This is especially true for headlights. Every broken headlight lamp reduces visibility and safety for you and the oncoming traffic. Philips X-tremeVision is optimized for a long and reliable lifetime. So you can see and be seen for longer than with any other high performance lamp.

Exceptional beam quality

With a combination of more light and increased color temperature, Philips X-tremeVision qualifies as one of the best performance beams in the halogen segment.

Extra light, extra lifetime



Philips X-tremeVision headlights are made for outstanding performance, producing up to 130% brighter light, without compromising on the lifetime. With up to 450 hours*, Philips X-tremeVision's lifetime is significantly higher than competitor solutions in the more light category. (*H4 and H7 tested at 13.2V standard voltage)

Great contrast drives comfort

The increased color temperature in Philips X-tremeVision headlights (available in H1, H4 and H7) allows your eyes to focus better and perceive contrasts in the far distance. This makes driving after dark a far more comfortable and safe experience.

See further, react faster

Perfect illumination is especially important in the distance – usually between 75-100 metres in front of your vehicle. Philips X-tremeVision boosts your visibility with up to 130% more brightness. This helps you recognise obstacles and any potential danger

One of the brightest bulbs



With its optimized high-precision filament geometry, up to 13 bar high pressure gas filling, high precision coating and high quality UV-Quarz glass, Philips X-tremeVision headlights set a new milestone in automotive lighting. They are engineered for the ultimate performance and uncompromising visibility.

The safest legal car lights



Philips X-tremeVision is by far the safest, easiest and most efficient way to upgrade your car headlights within legal parameters. They are fully ECE certified.

37168030

Specifications

Marketing specifications

- Expected benefits: More light
- Product highlight: Up to 130% brighter light

Product description

- Application: High beam, Low beam
- Base: PX26d
- Designation: H7 X-tremeVision
- Homologation ECE
- Range: X-tremeVision
- Technology: Halogen
- Type: H7

Lifetime

- Life time: Up to 450h

Light characteristics

- Lumens: 1500 ±10% lm
- Color temperature: 3500K K

Electrical characteristics

- Wattage: 55 W
- Voltage: 12 V

Ordering information

- Order entry: 12972XV+B1
- Ordering code: 37168030

Packaging Data

- Packaging type: B1
- EAN1: 8727900371680
- EAN3: 8727900371697

Packed product information

- Length: 9.5 cm
- Width: 3.5 cm
- Height: 12.9 cm
- Net weight per piece: 35.0 g
- Pack Quantity: 1
- MOQ (for professionals): 10

Outerpack information

- Length: 25.5 cm
- Width: 19.0 cm
- Height: 13.0 cm
- Gross weight per piece: 350 g



Issue date 2023-09-14

Version: 10.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com