

PHILIPS

5,000 K daylight-like
light

DiamondVision


Type of lamp: H7

12V, 60/55W

Blue-coated glass

Non-ECE homologated

12342DVB1

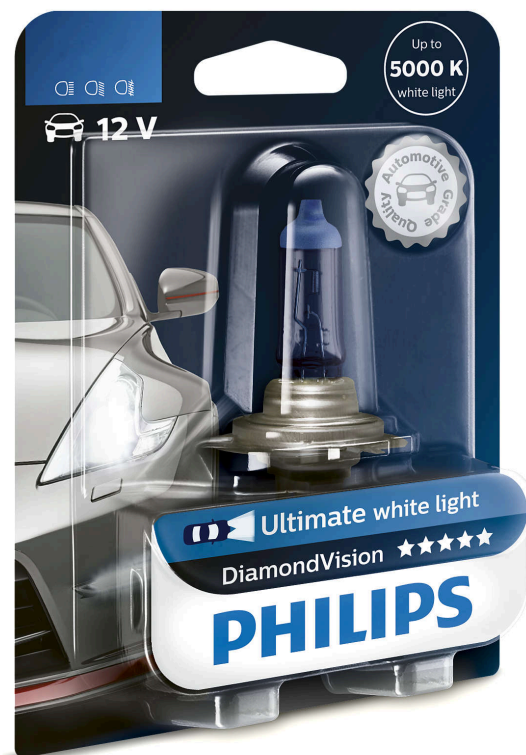

Drive with style

Up to 5000K ultimate white light

Philips DiamondVision halogen headlamp is the ultimate style upgrade for your car with up to 5000K white light. With the specially designed blue coating, DiamondVision makes you stand out from the crowd.

Stylish white light stands out

- DiamondVision lights up your car with 5000K white light
- Philips car lamps are made of high-quality quartz glass*

High quality and ultra resistant headlamp

- Change both your headlamps simultaneously for more safety
- Wide range of 12V lamps for all functions
- Philips is the choice of major car manufacturers
- Award-winning car lamp manufacturer
- Philips car lamps are highly resistant against humidity*
- Philips car lamps are highly UV resistant

Highlights

5000K white light for style



Based on the special complete blue coating design, DiamondVision is offering ultimate white light of 5000K, bringing style to your headlights

Car manufacturers' choice



For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

Commended Car lamps



Our lamps are often commended by automotive experts.

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful light.


Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog , front indicator, side

indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

Resistance against humidity

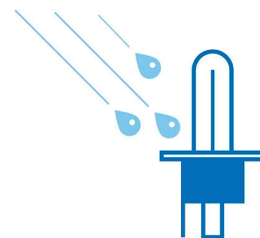

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : such as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit.

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass ideal for all driving conditions and ensures their longevity at the same time.

Specifications

Marketing specifications

Expected benefits: Style
Product highlight: 5000K

Product description

Application: Additional high beam, High beam,
Low beam
Base: PX26d
Designation: H7 WeatherVision
Homologation ECE: NO
Marking ECE: N/A

Range: DiamondVision
Technology: Halogen
Type: H7

Lifetime

Life time: B3/Tc = 200/400

Light characteristics

Color temperature: 5000 K
Lumens: 935 ±15% lm

Electrical characteristics

Wattage: 55 W
Voltage: 12 V

Ordering information

Ordering code: 53289030

Packaging Data

EAN1: 8727900532890
EAN3: 8727900532906

