

Philips LongLife EcoVision
car headlight bulb

Type of lamp: HIR2

Pack of: 1
12V, 55W
Long lasting

9012LLC1

Drive with care

Higher lifetime, less replacement

Tired of changing your headlight bulbs all the time? With higher lifetime of a car bulb, Philips Longlife EcoVision is the choice for drivers seeking to minimise maintenance on their vehicles.

Very high quality and ultra resistant car lamp

- Comply with the high quality standards of ECE homologation
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

Lasts significantly longer than a standard lamp

- Change both your headlamps at once for more safety
- Wide range of 12V lamps to meet all functions
- No replacement necessary for 100 000 km
- High quality filament design to minimize maintenance
- Less waste thanks to fewer replacement


Original Equipment manufacturer

- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation
- Philips are the choice of major car manufacturers.

PHILIPS

Highlights

Change by pairs

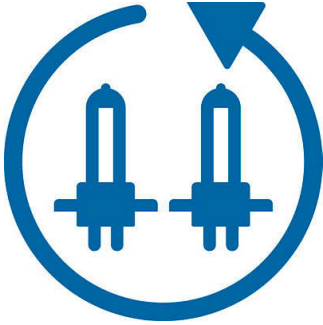


Highly recommended to change them by pairs for symmetric light performance

Designed for multiple usage



Which 12V lamp for which function ? Philips Automotive offering includes all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

Drive several times longer

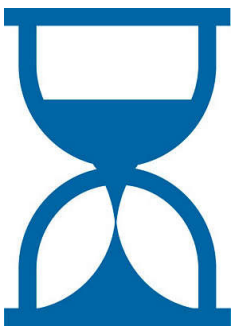

With Philips LongLife EcoVision drivers don't have to worry about changing a headlamp for at least 100 000 km.

High quality quartz glass




UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Reduced maintenance



With Philips LongLifeEcoVision you need significantly fewer lamp replacements. This makes them the ideal lamp for high voltage cars.

Resistance against humidity

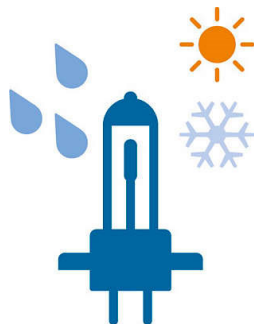

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist

thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

Rewarded Car lamps



Our lamps are often rewarded by automotive experts

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

Specifications

Marketing specifications

- Expected benefits: Long lasting
- Product highlight: Higher lifetime

Product description

- Application: High beam, Low beam, Daytime running light
- Base: PX22d
- Homologation ECE
- Range: LongLife EcoVision
- Technology: Halogen
- Type: HIR2

Lifetime

- Life time: 2000h

Light characteristics

- Lumens: 1350 \pm 10% lm
- Color temperature: Up to 3100 K

Electrical characteristics

- Wattage: 55 W
- Voltage: 12 V

Ordering information

- Order entry: 9012LLC1
- Ordering code: 35125530

Packaging Data

- Packaging type: C1
- EAN1: 8727900351255
- EAN3: 8727900370935

Packed product information

- Gross weight per piece: 25.6 g
- Length: 4.6 cm
- Width: 4.6 cm
- Height: 5.8 cm
- Net weight per piece: 19 g
- Pack Quantity: 1
- MOQ (for professionals): 10

Outerpack information

- Length: 23.8 cm
- Width: 9.3 cm
- Height: 7.8 cm



Issue date 2023-09-14

Version: 2.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com