



Philips Vision  
car headlight bulb

Type of lamp: H4

Pack of: 1  
12 V,60/55 W



12342PRB1

## Feel safe, drive safe

Up to 30% more vision compared to a standard lamp

Producing 30% more light compared to a standard car bulb, Vision headlight bulbs ensure excellent light-beam performance at a very competitive price with Original Equipment Quality for greater safety and comfort.

### Very high quality and ultra resistant car lamp

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

### A better performance than a standard car head lamp

- Vision bulbs project longer light beams than standard lamps
- Road safety begins with seeing and being seen
- Wide range of 12V lamps to meet all functions
- Change both your headlamps at once for more safety

### Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation


# PHILIPS

car headlight bulb  
Type of lamp: H4 Pack of: 1, 12 V,60/55 W

12342PRB1

# Highlights

## Up to 30% more vision

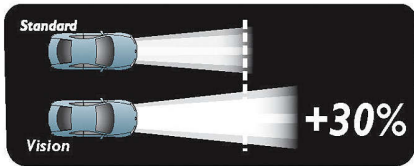

Our lighting solutions produce a powerful and precise beam of light with maximum output. We consistently produce the best, most efficient lighting solutions because we know that our high-quality lighting may one day save a life

## Better visibility and reaction



Light is a fundamental part of the driving experience and light is the first and only part of the safety circle that actually helps prevent accidents. Philips promotes active safety protection to prevent accidents by increasing overall visibility and road illumination.

## Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in

three worldwide is equipped with Philips lighting

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offering includes all car specific functions: high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

## ECE homologation


Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

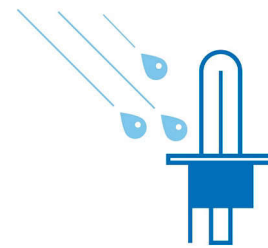

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks: if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Rewarded Car lamps



Our lamps are often rewarded by automotive experts

car headlight bulb  
Type of lamp: H4 Pack of: 1, 12 V,60/55 W

12342PRB1

# Specifications

## Marketing specifications

- Expected benefits: More light
- Product highlight: Up to 30% more vision

## Product description

- Application: High beam, Front fog light, Low beam
- Base: P43t-38
- Designation: H4 Vision
- Homologation ECE
- Marking ECE: E1 2C3
- Range: Vision
- Technology: Halogen
- Type: H4

## Lifetime

- Life time: Up to 500h

## Light characteristics

- Lumens: 1815 +4% -15% lm
- Color temperature: Up to 3200 K

## Electrical characteristics

- Wattage: 60/55 W
- Voltage: 12 V

## Ordering information

- Order entry: 12342PRB1
- Ordering code: 37850430

## Packaging Data

- Packaging type: B1
- EAN1: 8727900378504
- EAN3: 8727900378511

## Packed product information

- Width: 9.5 cm
- Height: 13.5 cm
- Net weight per piece: 21.5 g
- Gross weight per piece: 40 g
- Length: 4.798 cm
- Pack Quantity: 1
- MOQ (for professionals): 10

## Outerpack information

- Length: 25.5 cm
- Width: 14.1 cm
- Height: 14.2 cm
- Gross weight per piece: 0.4 kg



Issue date 2023-09-14

Version: 10.1.2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)