



Philips CrystalVision
car headlight bulb

HB4

12.8V

55W

2x T10 LED lamps included

9006CVSL

Drive with style

Bright white light

Philips CrystalVision halogen headlamp upgrades the style of your car with 4300K bright white light. With the blue coating and the silver top finishing, your car will look more stylish

Bright white light up to 4300K

- CrystalVision 4300K bright white light for style upgrade
- Bright white color match effect for high end look

High quality and ultra resistant headlamp


- Change both your headlamps simultaneously for more safety
- Philips car lamps are made of high-quality quartz glass[^]
- Philips car lamps are highly resistant against humidity[^]
- Philips car lamps are highly UV resistant
- Philips is the choice of major car manufacturers.

PHILIPS

car headlight bulb
HB4 12.8V, 55W, 2x T10 LED lamps included

Highlights

4300K bright white light

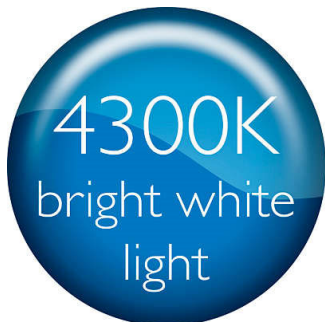

With the blue coating and silver top design, CrystalVision is offering bright white headlight of 4300K to see and to be seen, for both city and country driving

High-end look car

Supplied with two colour matching T10 LED position lamps, CrystalVision gives your car lights the premium look of high end cars.

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful lighting. ^Application varies per bulb type.

Resistance against humidity

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : such

as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

9006CVSL

Specifications

Marketing specifications

- Expected benefits: Bright white light
- Product highlight: 4300K

Product description

- Application: Additional high beam, High beam, Low beam
- Base: P22d
- Designation: HB4 CrystalVision
- Homologation ECE: NO
- Range: CrystalVision
- Technology: Halogen
- Type: HB4

Lifetime

- Life time: B3/Tc(14V) = 180/360

Light characteristics

- Color temperature: up to 4300 K
- Lumens [lm]: 1095 ±15%

Electrical characteristics

- Voltage: 12,8 V
- Wattage: 55 W

Ordering information

- Order entry: 9006CVSL
- Ordering code: 35452230

Packaging Data

- Packaging type: SL
- EAN1: 8727900354522
- EAN3: 8727900354539

Packed product information

- Gross weight per piece: 126.5 g
- Length: 10.9 cm
- Width: 5.3 cm
- Height: 10.9 cm
- Net weight per piece: 20.4 g
- Pack Quantity / MOQ: 20

Outerpack information

- Length: 27.6 cm
- Width: 22.8 cm
- Height: 12.6 cm
- Gross weight per piece: 2.53 kg



Issue date 2023-09-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com