



Philips CrystalVision  
Headlight bulb

Type of lamp: H1

Pack of: 2+2

12 V, 55 W

w5w position lamps included

12258CVSM

## Drive with style

### Bright white light

Philips CrystalVision halogen headlamp upgrades the style of your car with 4300K bright white light. With the blue coating and the silver top finishing, your car will look more stylish

#### **Bright white light up to 4300K**

- CrystalVision 4300K bright white light for style upgrade
- Bright white color match effect for high end look

#### **High quality and ultra resistant headlamp**

- Change both your headlamps simultaneously for more safety
- Wide range of 12V lamps for all functions
- Philips is the choice of major car manufacturers.
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity<sup>^</sup>
- Philips car lamps are highly UV resistant


# PHILIPS

## Headlight bulb

Type of lamp: H1 Pack of: 2+2, 12 V, 55 W, w5w position lamps included

# Highlights

### 4300K bright white light

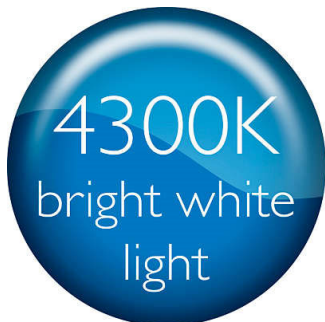

With the blue coating and silver top design, CrystalVision is offering bright white headlight of 4300K to see and to be seen, for both city and country driving

### High-end look car

Supplied with two colour matching w5w position lamps, CrystalVision gives your car lights the premium look of high end cars.

### High quality quartz glass

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful light. ^Application varies per bulb type

### Resistance against humidity

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : such as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

### UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation,

making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

### Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

### Change by pairs



Highly recommended to change them by pairs for symmetric light performance

### Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

12258CVSM

# Specifications

### Marketing specifications

- Expected benefits: Style
- Product highlight: 4300K

### Product description

- Application: Additional high beam, High beam, Low beam
- Base: P14.5s
- Designation: H1 CrystalVision
- Homologation ECE: NO
- Marking ECE: N/A
- Range: CrystalVision
- Technology: Halogen
- Type: H1

### Lifetime

- Life time: 250 h

### Light characteristics

- Lumens: 1550 ±15%
- Color temperature: up to 4300 K

### Electrical characteristics

- Voltage: 12 V
- Wattage: 55 W

### Ordering information

- Order entry: 12258CVSM
- Ordering code: 69689230

### Packaging Data

- Packaging type: SM
- EAN1: 8711500696892
- EAN3: 8711500789228

### Packed product information

- Gross weight per piece: 77.9 g
- Length: 11 cm
- Width: 5.3 cm
- Height: 13.3 cm
- Net weight per piece: 16 g
- Pack Quantity / MOQ: 20
- Pack Quantity: 4
- MOQ (for professionals): 5

### Outerpack information

- Length: 28.6 cm
- Width: 14.1 cm
- Height: 12 cm
- Gross weight per piece: 0.466 kg



Issue date 2023-09-14

Version: 13.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Application varies per bulb type