

Philips LongLife EcoVision  
interior and signaling  
bulb

Type of lamp: P21W

Pack of: 10  
12 V, 21 W

12498LLECOCP



## Drive with care

### Higher lifetime, less replacement

Tired of changing your signaling and interior bulbs all the time? With higher lifetime of a car bulb, Philips LongLife EcoVision is the choice for drivers seeking to minimise maintenance on their vehicles.

#### **Very high quality and ultra resistant car lamp**

- Philips car lamps are made of high-quality quartz glass
- Comply with the high quality standards of ECE homologation
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

#### **Lasts significantly longer than a standard lamp**

- Change both your headlamps at once for more safety
- Wide range of 12V lamps to meet all functions
- Less waste thanks to fewer replacement
- High quality filament design to minimize maintenance

#### **Original Equipment manufacturer**

- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation
- Philips are the choice of major car manufacturers.

# PHILIPS

interior and signaling bulb<br>  
Type of lamp: P21W Pack of: 10, 12 V,21 W

12498LLECOCP

# Highlights

## ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## Car manufacturers' choice

For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Designed for multiple usage



Which 12V lamp for which function ? Philips Automotive offering includes all car specific

functions : high beam, Low beam, front fog , front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

## ECE homologation

Philips Automotive is dedicated to producing best-in-class products and services in the Original Equipment Manufacturer market as well as in the aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to maximise the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements.

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Reduce waste, drive greener


It is the right choice for drivers looking for an environmentally friendly lighting solution.

## Reduced maintenance



With Philips LongLifeEcoVision you need significantly fewer lamp replacements. This makes them the ideal lamp for high voltage cars.

## Resistance against humidity

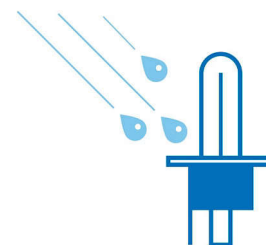

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Rewarded Car lamps



Our lamps are often rewarded by automotive experts

# Specifications

## Marketing specifications

- Expected benefits: Long lasting
- Product highlight: Higher lifetime

## Product description

- Application: Front indicator, Interior, License, Rear fog light, Rear indicator, Reversing light, Side indicator, Stop light, Boot light, Daytime running light, Tail light
- Base: BA15s
- Designation: P21W LongLife EcoVision
- Homologation ECE
- Range: LongLife EcoVision
- Technology: Conventional
- Type: P21W

## Lifetime

- Life time: 1250h

## Light characteristics

- Lumens: 460 lm

## Electrical characteristics

- Wattage: 21 W
- Voltage: 12 V

## Ordering information

- Order entry: 12498LLECOCP
- Ordering code: 38198673

## Packaging Data

- Packaging type: CP
- EAN1: 8727900381986
- EAN3: 8727900391695

## Packed product information

- Net weight per piece: 7.7 g
- Gross weight per piece: 11.5 g
- Pack Quantity: 1
- MOQ (for professionals): 50

## Outerpack information

- Width: 26.1 cm
- Height: 17.5 cm
- Gross weight per piece: 2.3 kg



Issue date 2023-09-14

Version: 8.0.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)