




Philips DiamondVision
Headlight bulb

Type of lamp: Car

Pack of: 2
12 V, 27 W

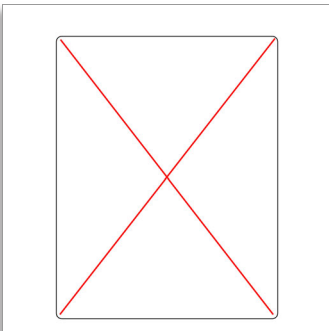

881DVS2

Drive with style

5000K ultimate white light

Philips DiamondVision halogen headlamp is the ultimate style upgrade for your car with 5000K white light. With the specially designed blue coating, DiamondVision makes you stand out from the crowd. .

Stylish white light stands out

- Cool elegance for your headlights

High quality and ultra resistant headlamp

- Change both your headlamps simultaneously for more safety
- Philips car lamps are made of high-quality quartz glass[^]
- Wide range of 12V lamps for all functions
- Philips is the choice of major car manufacturers.
- Philips car lamps are highly resistant against humidity[^]
- Philips car lamps are highly UV resistant

PHILIPS

Headlight bulb
Type of lamp: Car Pack of: 2, 12 V, 27 W

Highlights

5000K white light for style

Philips DiamondVision Vision headlight lamps provide the perfect choice for drivers who want a crisp white look for their headlights. Thanks to the Philips patented coating technology, DiamondVision provide a truly white light for great visibility and style.

Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and

vibrations, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withstand increased pressure inside the lamp, UV-quartz glass is able to produce more powerful lighting. ^Application varies per bulb type.

Resistance against humidity

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : such as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

881DVS2

Specifications

Marketing specifications

- Expected benefits: Ultimate white light
- Product highlight: 5000K

Product description

- Application: Additional high beam, High beam, Low beam
- Base: PGJ13
- Designation: 881
- Homologation ECE: NO
- Marking ECE: N/A
- Range: DiamondVision
- Technology: Halogen
- Type: 881 DiamondVision

Lifetime

- Life time: 300 h

Light characteristics

- Color temperature: up to 5000 K
- Lumens: 150 lm ± 15 % lm

Electrical characteristics

- Wattage: 55 W
- Voltage: 12 V

Ordering information

- Ordering code: 35252830

Packaging Data

- Packaging type: S2
- EAN1: 8727900352528
- EAN3: 8727900352535

Packed product information

- Width: 5.3 cm
- Height: 10.9 cm
- Net weight per piece: 12.6 g
- Gross weight per piece: 126,5 g
- Length: 10.9 cm
- Pack Quantity / MOQ: 20

Outerpack information

- Length: 27.6 cm
- Width: 22.8 cm
- Height: 12.6 cm
- Gross weight per piece: 2,53 kg



Issue date 2023-09-14

Version: 7.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Application varies per bulb type