



Philips Micro X-Clean
filtration
Compact Water Station,
Hot & Cold

Hot water in seconds

Chilled water on demand
Micro Filtration Softening+
Compact size



ADD5981GR/79

Enjoy better tasting water, chilled to piping hot

With Micro X-Clean Softening+ filtration

This new Philips Water Station combines filtration, heating, and cooling in one compact device. Various temperatures and volume settings. Next level convenience. Available via The Good Guys, Myer, Bing Lee, Harvey Norman, Amazon.

Your Drinks, Your way

- Chilled (8°C) water on demand
- Hot water within seconds

Cleaner water assured

- Softer and better tasting water

Smart and stylish design

- Modern design easily fits your home style

Worry-free to use and maintain

- Safety lock to avoid scalding
- BPA-free

PHILIPS

Compact Water Station, Hot & Cold
Hot water in seconds Chilled water on demand, Micro Filtration Softening+, Compact size

Specifications

Filtration performance

- Chlorine reduction
- Heavy metal removal
- Pesticide removal
- Water hardness reduction
- VOC reduction
- PFOA reduction
- Microplastics reduction
- Micro X-Clean Softening+ filter: 100L/1 month

Purification system

- VOC Removal

Cooling Performance

- Cooling capacity: 1.0L per hour
- Cooling system: Peltier cooling
- Cooling temperature: Down to 8°

Filter specifications

- Filter precision: 5-10 microns

General specifications

- Voltage and frequency: 220V-240V~, 50Hz/60Hz
- Applicable inlet water: Municipal tap water
- Product Dimension (LxWxH): 400*200*337 mm
- Product color: Cool gray
- Replacement filter cartridge: AWP230
- Inlet water temperature: 5-38 °C
- Display: LED
- Tap water tank: 2.8L capacity
- Heating system: Instant heating

Main parameters

- Color: Grey
- Rated Power: 2200 W
- Inlet water pressure: 0.1-0.4 PMA

Service

- Warranty period: 2 years

ADD5981GR/79


Highlights

Hot water within seconds



Filtered hot water dispenses within seconds.
Multiple temperatures available: Ambient, 40°, 70°, 80°, 90°, 100°C.

Peltier cooling system

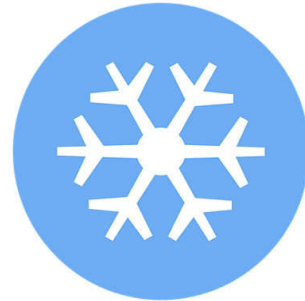

With the peltier cooling, you can easily enjoy refreshing chilled water down to 8° at the touch of the screen. Chills 1.0L down from ambient (<25C) in less than one hour.

Micro X-Clean Softening filter



Philips Micro X-Clean Softening+ filters improve the taste and quality of water by reducing chlorine, heavy metals and emerging contaminants such as microplastics and PFOA*. The Softening+ filter also offers 50% more protection against limescale build-up. Enjoy crisp and pure tasting water!

Modern design

The modern and sleek design is perfect for anyone who favors style and simplicity.

Safety lock

When dispensing hot water, the safety lock will be automatically activated to ensure safety.



Issue date 2023-12-27

Version: 15.15.1

EAN: 48 95244 60917 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

** Tested by 3rd party testing agency under laboratory conditions.
The contaminants or other substances reduced by this water filter are not necessarily in all users' water.
*** Tested by 3rd party testing agency under laboratory conditions.