

Philips 5000 series
Smart rim lock

Easy assembling

Semiconductor fingerprint
App smart control
Auto locking

DDL502Q00BB

Sleek and compact design

With effortless setup to save your time

Featuring a sleek and compact design, Philips DDL502-13HBS allows for fast and simple setup with no mortise required. Perfect for home, studios, offices, or stores. Ditch the keys and enjoy easy access to your space with this product.

Secure protection, smart embedded

- Automatic locking upon door closed
- Safeguarding your home

Easy life goes beyond this

- Say goodbye to the key-only era
- Effortlessly meet your diverse needs


Smart life "locked" with excellence

- Instant unlock with one touch
- Manage your locks with our all-in-one solution

PHILIPS


Highlights

Semiconductor fingerprint

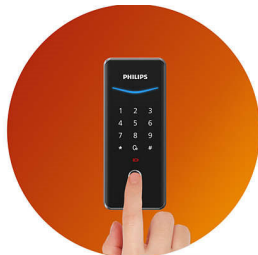

Unlock the door with a single touch of your fingertip using the semiconductor fingerprint sensor of the DDL502-13HBS. With a recognition speed no more than 0.5 seconds*, enjoy a fast and convenient door-opening experience.

App* control

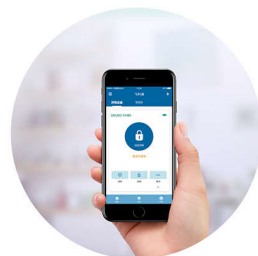

By connecting the DDL502-13HBS lock to the Philips EasyKey Plus App, you can access information such as battery level and activity history, and even unlock the door with a single touch on your phone from up to 10 meters* away.

Hall sensor




Our lock comes with Hall sensor technology to automatically lock the door as soon as it's closed in auto mode. The deadbolt pops up instantly, providing you with peace of mind as you leave.

Multiple alerts




Our DDL502-13HBS smart lock comes with multiple alerts including anti-disassembly, system lockout, abnormal deadbolt, and privacy mode alerts. It not only provides constant protection for your home, but also keeps you updated on the condition of the door lock in real time for your convenience.

3 unlocking methods

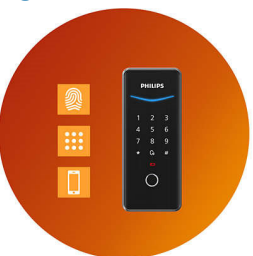

Our DDL502-13HBS smart lock supports three unlocking methods: fingerprint, PIN code, and mobile app. This allows you to effortlessly and securely unlock your door in any situation, meeting your various unlocking needs. With our smart and convenient unlocking experience, you'll enjoy the ultimate peace of mind.

Switch between 5 languages

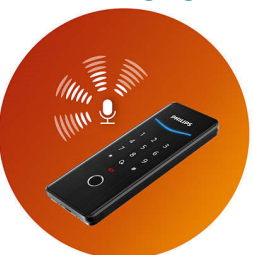

Philips DDL502-13HBS smart lock features real human voice navigation*, supporting five languages including Chinese, English, Spanish, Portuguese, and Indonesian. With simple operation and easy language switching, it can meet the diverse needs of users.

Specifications

Design & Appearance

- Color: Obsidian black
- Handle: No handle
- Main Material: Aluminium alloy
- Fingerprint Sensor: Semiconductor

Access Solution

- Fingerprint
- Password/PIN Code

Power Specification

- Power Supply: 4 AA batteries
- Battery Type: Alkaline Batteries
- Time of Use: 10 months*
- Emergency Power Supply: 5V power bank

Easy Operation

- Voice Guide: Human voice guide

Installation

- Door Thickness: 30-50 mm, 50-90 mm, Other range*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Wooden door

* 0.5S data source: Internal test report.

* App: refers to the "Philips EasyKey Plus" app. (Note: The lock information can only be uploaded to the app when the lock is connected to the app.)

* 10 meters: the distance is based on internal laboratory testing and may vary slightly depending on usage environment and network signal. For more accurate results, please be subject to the actual usage.

* Real human voice navigation: defaults to English but can be easily switched to other languages via the lock's settings.

* 10 months: this is internal test data; actual duration may vary with usage frequency.

* The effect of the digital keypad showed in the photos of this product may be inconsistent with the actual display effect. Please be subject to the digital keypad displaying status under the actual usage scenarios.



Issue date 2024-08-19

Version: 2.2.1

EAN: 69 71318 50445 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com