




Philips Micro X-Clean
filtration
All-in-One Water Station,
gen II

Instant heating

Electric cooling
6 preset temperatures
Micro X-Clean filtration
Softening+

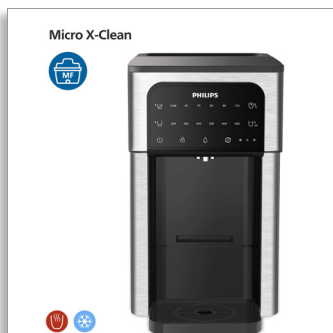

ADD5980S/79

Water from refreshingly chilled to piping hot

Better taste thanks to Micro X-Clean Softening+

High performance meets ultra-convenience. You can enjoy better tasting water from refreshingly chilled to piping hot for various needs. Multiple volume settings at the touch of a button: 200ml, 250ml, 300ml, 350ml, 400ml, 500ml

Your Drinks, Your way

- Commonly-used volume settings at the touch of a button

Your Drinks, Your way

- Chilled (8°C) water on demand
- Hot water within seconds

Cleaner water assured

- Softer and better tasting water

Smart and stylish design

- Modern design easily fits your home style

Worry-free to use and maintain

- Safety lock to avoid scalding
- BPA-free

PHILIPS

Highlights

Hot water within seconds



Filtered hot water dispenses within seconds.
Multiple temperatures available: Ambient, 40°, 70°, 80°, 90°, 100°C.

Peltier cooling system



With the peltier cooling, you can easily enjoy refreshing chilled water down to 8 at the touch of the screen. Chills 1.0L down from ambient (<25C) in less than one hour.

Micro X-Clean Softening filter



Philips Micro X-Clean Softening+ filters improve the taste and quality of water by reducing chlorine, heavy metals and emerging contaminants such as microplastics and PFOA*. The Softening+ filter also offers 50% more protection against limescale build-up. Enjoy crisp and pure tasting water!

Commonly-used volume settings

You can always find a suitable water volume to fill your cups, mugs, bottles, or even jugs.

Safety lock

When dispensing hot water, the safety lock will be automatically activated to ensure safety.

BPA-free

All parts that come into direct contact with water are made of BPA-free materials.

Modern design

The modern and sleek design is perfect for anyone who favors style and simplicity.

Specifications

Filtration performance

- Chlorine reduction
- Heavy metal removal
- Pesticides reduction
- Water hardness reduction
- PFOA reduction
- Microplastics reduction
- Micro X-Clean Softening+ filter: 100L/1 month
- Stage of filtration: 4-stage

Purification system

- VOC Removal

Cooling Performance

- Cooling capacity: 1.0L per hour
- Cooling system: Peltier cooling
- Cooling temperature: Down to 8°

Filter specifications

- Replacement filter cartridge: AWP230

General specifications

- Voltage and frequency: 220V-240V~, 50Hz/60Hz
- Applicable inlet water: Municipal tap water
- Product Dimension (LxWxH): 400*200*337 mm
- Product color: Green
- Inlet water temperature: 5-38 °C
- Display: LED
- Tap water tank: 3.8L capacity
- Heating system: Instant heating

Main parameters

- Color: Nature stainless steel
- Rated Power: 2100 W
- Inlet water pressure: 0.1-0.4 MPa



Issue date 2024-09-23

Version: 13.13.1

EAN: 48 95244 60914 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

** Tested by 3rd party testing agency under laboratory conditions.
The contaminants or other substances reduced by this water filter are not necessarily in all users' water.
*** Tested by 3rd party testing agency under laboratory conditions.
*** Hot water temperature settings are measured at the heating element, not the dispensed temperature. This appliance is not calibrated for commercial or scientific use. Temperatures may vary.