

Philips Performer
Bagged vacuum cleaner

2200 W

500W suction power
Allergy H13 filter

FC9177/04



The highest suction power ever

500 Watt suction power for effortless cleaning

The highest suction power ever, resulting in effortless cleaning: this is what the Philips Performer range is all about. Combined with a hygienic filter and easy dustbag removal system the Performer range takes care of all your dust & dirt.

Superior performance

- Allergy H13 filter system captures >99.9% of fine dust
- 2200W motor generating max. 500W suction power
- TriActive nozzle for 3-way thorough cleaning action

Superior performance

- TriActive+ LED nozzle reveals hidden dust for thorough clean

Effortless cleaning

- Easy long-lasting bags fit into XXL 4-liter dust chamber
- Long 10-meter reach goes further without unplugging
- Soft brush integrated into handle, always ready to use

PHILIPS

Bagged vacuum cleaner
2200 W 500W suction power, Allergy H13 filter


Highlights

Long-lasting 4L s-bags




Large 4-liter dust chamber and long-lasting universal bags allow optimum suction power until full, plus sealed, mess-free disposal.

Long 10-meter reach

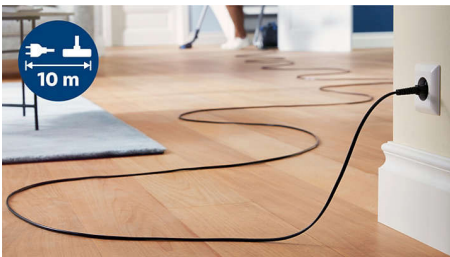


With a reach of 10 meters from plug to nozzle, it keeps you cleaning longer without unplugging.

Allergy H13 filter

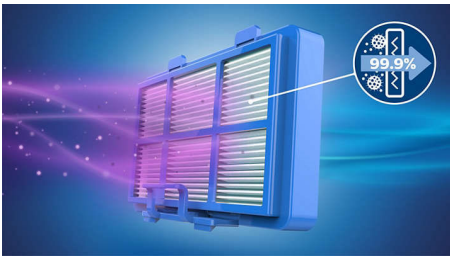

Allergy H13 filter system catches >99.9% of fine dust particles - including pollen, pet hair and dustmites - ideal for allergy sufferers. Filtration level is equivalent to HEPA 13*.

Powerful cleaning

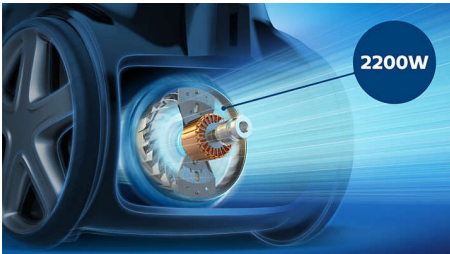

Highly efficient 2200 Watt motor generates max. 500 Watt suction power for perfect cleaning results.

TriActive nozzle




TriActive nozzle utilizes 3 cleaning actions in one go. The specially designed soleplate removes dust from deep within carpets, while the large front opening sucks up big bits. Air channels on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

TriActive+ LED nozzle



TriActive+ LED lights make invisible dust visible on hard floors so you never miss a spot and can ensure the most thorough cleaning on all types of hard floors. A sensor automatically turns the LED lights on when the nozzle is in use and off when it is not. 3x AA batteries included.

Integrated brush

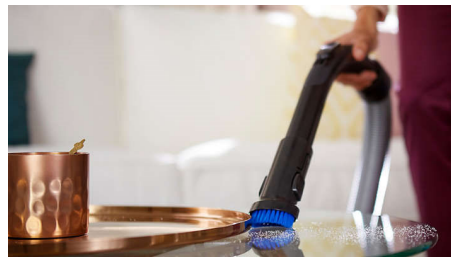

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

FC9177/04

Specifications

Nozzles and accessories

- Standard nozzle: TriActive LED nozzle
- Accessories included: Crevice tool, Small nozzle

Design

- Color: Slate grey

Weight and dimensions

- Dimensions of product (LxWxH): 500 x 320 x 280 mm
- Weight of product: 6.3 kg

Performance

- Input power (IEC): 1800 W
- Input power (max): 2200 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 500 W
- Vacuum (max): 34 kPa
- Airflow (max): 47 l/s

Filtration

- Dust bag type: s-bag
- Dust capacity: 4 L
- Exhaust filter: Allergy H13 filter
- HEPA Air Seal

Usability

- Action radius: 10 m
- Cord length: 7 m
- Tube coupling: SmartLock
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Dust full indicator
- Wheel type: Rubber
- Clean Comfort cassette



Issue date 2023-12-05

Version: 4.4.1

EAN: 87 20389 02750 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.