




Philips AquaTrio Cordless
Cordless Wet & Dry
Vacuum 9000 Series

Vacuum and high-speed mop

For dust, dirt, stains, spills
Dedicated vacuum only set-up
Up to 45 min, 25 min in
Vac&Mop**

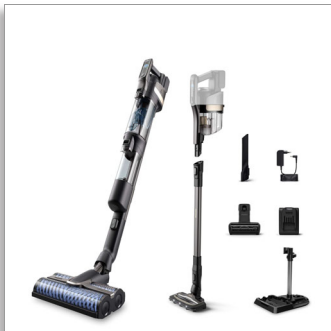

XW9383/03

The most complete* hygienic cleaning solution with 2 high-speed constantly cleaned Power Brushes

Provides a complete, hygienic clean. The vacuum and mop removes dust, dirt, stains, spills and bacteria in one go, on hard floors. Plus additional vacuum only set-up for powerful dirt pick-up on carpets, rugs and hard floors.

Vacuum and mop, double the power in one stroke***

- AquaSpin technology to vacuum and mop your floor in one go
- Self-cleaning Power Brushes with patented technology
- Always clean mopping water from dedicated water tank
- Aqua Diffusion System immediately locks in dirty water
- Automated self-cleaning of the appliance and Power Brushes

Dedicated vacuum only set-up for powerful pick-up

- Dedicated vacuum for precise and powerful dirt pick-up
- Deep reach under low objects
- Detachable handheld for added convenience

Get the most out of your clean

- Digital LCD smart screen for in- and after use guidance
- Up to 45 minutes runtime

Vacuum and mop, double the power in one stroke**

- 3 cleaning modes to adjust to different cleaning needs

PHILIPS

Cordless Wet & Dry Vacuum 9000 Series

Vacuum and high-speed mop For dust, dirt, stains, spills, Dedicated vacuum only set-up, Up to 45 min, 25 min in Vac&Mop**

Highlights

Vacuum only set-up with LED




For vacuuming without water easily change the system to the advanced vacuum only set-up by attaching the 3-in-1 Handheld to the dry vacuum stick. It's designed to deliver precise and powerful pick-up on all your floors, capturing up to 98% of dust and dirt, in each stroke****. LED lights on the nozzle highlight hard to detect or previously hidden dirt, making things like fine dust, fluff, hair and crumbs easy to spot, especially under furniture or anywhere you need extra light.

Digital LCD smart screen



Digital LCD smart screen guides you with all information you need during and after the clean. Turn to the LCD screen to get live information on battery power status, cleaning modes, maintenance support and much more.

AquaSpin technology

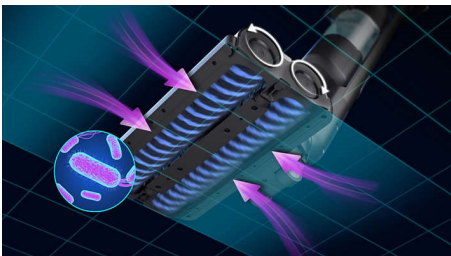

The unique AquaSpin nozzle vacuums and mops your hard floors at the same time, picking up dirt at both the front and back of the

nozzle to make every stroke count. You'll no longer have to mop after vacuuming, giving you time back in your busy day and reducing physical effort. AquaSpin technology is designed to remove dust, dirt, stains, spills and up to 99.9% of bacteria****, all in one go, on your hard floors.

Long-lasting runtime




Powerful lithium-ion battery provides long-lasting power to clean for up to 25 minutes in one go using regular mode in the vacuum & mop set-up. In the vacuum only set-up, you can clean for 45 minutes in regular mode and 25 minutes in Turbo mode.

Deep reach



Enjoy exceptional maneuverability on all types of floors, with deep reach, even under low furniture.

Self-cleaning Power Brushes

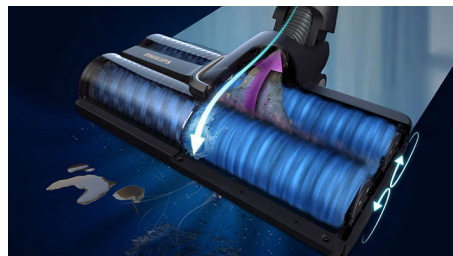

The two ultra-soft microfiber Power Brushes counter-rotate at 4500 RPM. At this high

XW9383/03


speed, dirt is picked up from the floor and directly swept into the appliance, leaving the Power Brushes constantly cleaned, so you never need to rinse and wring out a dirty mop to clean with again! For optimal cleaning performance, it is recommended to replace the Power Brushes every 6 months.

Detachable handheld



The vacuum only set-up can easily be transformed from a cordless vacuum stick to a convenient handheld. Clean upholstery, shelves and table surfaces with ease, while also perfect for quick touch-ups or car cleaning.

Constant clean water flow

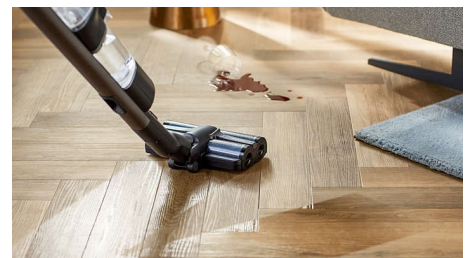

A constant flow of clean water from a dedicated clean water tank is released onto the floor, and immediately picked up again by the two Power Brushes. This ensures that each part of your floor is only cleaned with clean water and helps it to quickly dry up, up to 50% faster****. You'll never need to drag around a heavy mop bucket or use dirty mopping water again! When using detergent, recommended is to use the Philips Floor Cleaner (10 ml per use).

Cordless Wet & Dry Vacuum 9000 Series

Vacuum and high-speed mop For dust, dirt, stains, spills, Dedicated vacuum only set-up, Up to 45 min, 25 min in Vac&Mop**

Specifications

XW9383/03

Performance

- Motor: Hybrid Power Motor (HPM)
- Cyclone: PowerCyclone 12
- Battery type: Lithium-ion battery
- Exchangeable batteries
- Runtime vac & mop regular mode: 25 minutes
- Runtime vac only regular mode: 45 minutes
- Runtime vac only turbo mode: 25 minutes
- Charging time: 4 hours
- Airflow (max): 840 l/min
- Battery voltage: 25.2 V

Usability

- Clean water tank capacity: 450 ml
- Dirty water tank capacity: 400 ml
- Dirt water tank full indicator
- Surface coverage per battery: Up to 185 m²

Filtration

- Filter system: 3-stage cyclonic action

Nozzles and accessories

- Standard nozzles: AquaSpin nozzle, LED nozzle
- Accessories included: After-clean & storage station, Mini-Turbo brush, Long crevice tool,

Cleaning brush

Design

- Color: Deep Black

Sustainability

- Packaging: > 90% recycled materials

Product weight and dimension

- Dimensions in vac & mop set-up: L25xW27xH114 cm
- Dimensions in vac only set-up: L30xW26xH118 cm
- Weight in vac & mop set-up: 4.2 kg
- Weight in vac only set-up: 3.0 kg
- Dimensions After-clean & Storage station: L48xW34,5xH52 cm

Consumer Trade Item

- GTIN: 8720389028588
- Country of origin: CN

Other

- GTIN: 68720389028580



Issue date 2023-09-28

Version: 1.1.1

EAN: 87 20389 02858 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The only cordless solution with 3 configurations (vacuum only, vacuum and active mop, handheld); front & backward removal of multiple dirt types including spills and constantly cleaned brushes.
* * 45 min: Applies in normal mode, vacuum only set-up, 25 min: Applies in normal mode, vacuum and mop set-up.
* ** Refers to the combined functionality of vacuuming and mopping
* *** Tested with bacteria Staphylococcus aureus, in vacuum and mop set-up (intensive setting), using water only
* **** As measured versus a manual mop. Internal test.
* ***** In vacuum only set-up, on hard floors. Internal test for coarse dirt pick-up