

Philips NeoPix Ultra One+
Home projector

True FULL HD 1080 p
Android TV experience
Ultra connected
Remarkably compact

NPX646



Bright and colourful cinematic experience

Compact and lightweight, the Ultra One+ projects in True Full HD. It includes an Android TV dongle with all of your favourite apps and Chromecast built-in, multiple image corrections, stereo speakers for wide sound and HDMI connections.

Android TV experience

- OK Google Ready
- Android TV Experience
- ChromeCast Built-in

True Full HD 1080p

- Advanced LED Light Source
- True Full HD 1080p resolution
- Customise your projection

Remarkably compact

- Quality stereo speakers


Ultra connected

- Bluetooth Connectivity
- Multiple Connections

PHILIPS


Highlights

Advanced LED Light Source

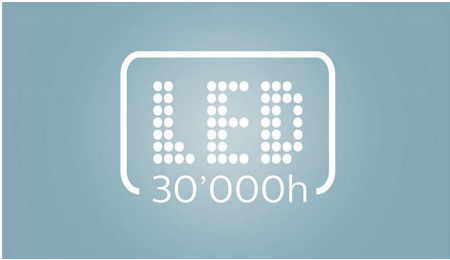

The powerful LED light source displays rich, vivid colours and will last up to 30,000 hours. You won't need to replace it as it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp-based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco-friendly device!

Android TV Experience

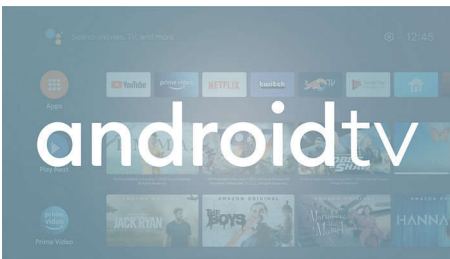

Your Philips Android TV Projector gives you the content you want when you want it. You can customise the home screen to display your favourite apps, making it effortless to start streaming the films and shows you love or pick up where you left off. Our OSD has a new intuitive UI design, which makes it a breeze to navigate and find your way around. Powered by the fastest AMLOGIC CPU, it provides a smooth, best in class Android TV experience.

Bluetooth Connectivity



With the built-in Bluetooth functionality, you can easily connect wireless speakers directly to the Android TV dongle for better sound. Have a mouse, keyboard or other remote controls too? No worries, you can connect any of those accessories to control the Android TV or play games with an external Bluetooth Gamepad.

ChromeCast Built-in



Chromecast built-in is a piece of technology that allows you to stream your favourite entertainment and apps from your phone, tablet or laptop right to your TV or speakers. Your phone acts as a simple, powerful remote. Just open the mobile apps you already know and love to quickly access your TV shows and playlists. No new logins or downloads required. You can use your phone to search, browse, queue and control the projector from anywhere in the home, and keep using it without disrupting what's playing or draining your battery.

Customise your projection



Place the product wherever you want! The keystone correction combined with the focus technology allow you to fine-tune images to your needs and place your projector at any distance.

Multiple Connections



Connect all your favourite devices via HDMI (like smartphone, tablet, laptop, gaming console), and play all your videos, pictures and audio files from a USB thanks to the built-in multimedia player. There is also a 2 x HDMI, USB and Jack 3.5 to connect external speakers. The additional Wi-Fi MIMO Dual Band technology reduces buffering and is ideal for online gaming or watching Full HD films.

OK Google Ready



Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your projector. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on film night.

Specifications

Technology

- Display technology: LCD
- Light source: LED
- Contrast ratio: 3000:1
- Resolution: 1920 x 1080 pixels
- Throw ratio: 1,4:1
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Keystone correction: Manual
- LED lifetime: Up to 30,000 h
- Projection image size: up to 200 cm (80")
- Projection distance: 80 cm - 200 cm/24" - 60"
- Resolution supported: 1920 x 1080 pixels

Connection

- Wi-Fi: Wireless screen mirroring
- Bluetooth: Connect external speaker
- HDMI: x 2
- USB: x 1

- VGA: x 1
- Micro SD: x 1
- Audio out: 3.5 mm jack
- AV in: 3.5-mm jack
- DC-IN: DC jack

Sound

- Stereo Speaker: 2 x 5 W
- Bluetooth speaker connection

Dimensions

- Weight: 2.69lbs / 1.2 kg
- unpacked (W x D x H): 220 x 170 x 90 mm/8.6 x 6.6 x 3.5 inch

Power source

- Power consumption: Operation: 100 W, Stand by <0,5 W
- DC-in: 24 V, 4 A (AC 100-240 V)



Issue date 2023-09-28

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com