



Philips NeoPix Ultra 2TV+  
Home projector

120" in True FULL HD 1080p

Android TV experience  
Booming sound  
Ultra connected



NPX644

## Massive image, Android TV ready

Based on Android TV, the Ultra 2TV+ projects images in True Full HD. Thanks to multiple image corrections, incredible speakers, low fan noise and REC709 colour space, you can get the best entertainment experience on a massive 120" display!

### Connect, Watch and Play

- Advanced LED Light Source
- Wide range of connections

### Android TV experience

- OK Google Ready
- Android TV Experience
- ChromeCast Built-in
- Media Player

### A new dimension of sound

- DSP
- Xtreme Sound

### Unforgettable images in True Full HD

- Ideal for home entertainment
- True Full HD 1920 x 1080
- Bespoke Corrections


# PHILIPS

Home projector  
120" in True FULL HD 1080p Android TV experience, Booming sound, Ultra connected

NPX644/INT

# Highlights

## Android TV Experience

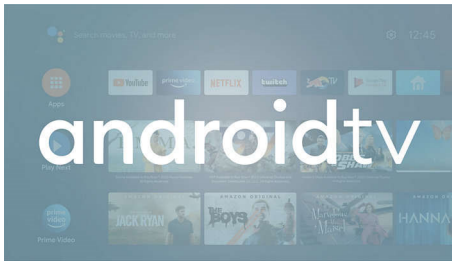

Your Philips Android TV Projector gives you the content you want when you want it. You can customise the home screen to display your favourite apps, making it effortless to start streaming the films and shows you love or pick up where you left off. Our OSD has a new intuitive UI design, which makes it a breeze to navigate and find your way around. Powered by the fastest AMLOGIC CPU, it provides a smooth, best in class Android TV experience.

## ChromeCast Built-in



Chromecast built-in is a piece of technology that allows you to stream your favourite entertainment and apps from your phone, tablet or laptop right to your TV or speakers. Your phone acts as a simple, powerful remote. Just open the mobile apps you already know and love to quickly access your TV shows and playlists. No new logins or downloads required. You can use your phone to search, browse, queue and control the projector from anywhere in the home, and keep using it without disrupting what's playing or draining your battery.

## Media Player




Pop your essentials in your hand with the integrated Media Player. Browse, watch all your videos, listen to your music or share your latest holiday pictures from external storage sources like a USB stick or hard drive. Just plug your external storage device to the USB-A port and play all your local content thanks to a range of apps from the Play Store (like Plex, VLC etc.)

## OK Google Ready



Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your projector. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on film night.

## Advanced LED Light Source

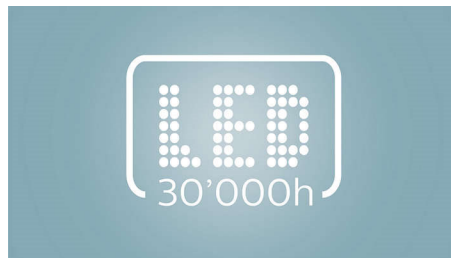

The powerful LED light source displays rich, vivid colours and will last up to 30,000 hours.

You won't need to replace it as it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp-based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco-friendly device!

## Bespoke Corrections



Place the projector wherever you wish! Auto-keystone and 4-corner correction help to eliminate crooked, distorted images for a perfectly proportioned picture even if the device is not straight in front of the wall. It also gives users an optimal image from virtually any angle and eliminates many of the hassles of an optimal set-up. Big space, small wall? No worries! The digital zoom maximises the image size even if your projector is far away from a wall. Thanks to the 1.44 throw ratio, small spaces get a bigger picture. Ultra 2TV+ requires as little as 3.8 m to project stunning 120" pictures.

## DSP



Digital Signal Processing enhances all sound frequencies, helping you to fully immerse yourself in your favourite TV content.

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Contrast ratio: 3000:1
- Resolution: 1920 x 1080 pixels
- Throw ratio: 1,4:1
- Screen distance: 175 cm to 383 cm/68" to 151"
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Keystone correction: Manual, Auto
- LED lifetime: Up to 30,000 h
- Projection image size: up to 300 cm (120")
- Resolution supported: 1920 x 1080 pixels

## Connection

- Wi-Fi: Wireless screen mirroring
- Bluetooth: Connect external speaker
- HDMI: x 1

- USB: USB 2.0, USB Type-C
- SPDIF
- Audio out: 3.5 mm jack

## Sound

- Stereo Speaker: 2 x 10 W
- Bluetooth speaker connection

## Dimensions

- Weight: 8.8lbs / 4.3 kg
- unpacked (W x D x H): 391 x 351 x 203 mm / 15.4 x 13.8 x 8 inch

## Power source

- Power consumption: Operation: 100 W, Stand by <0,5 W
- DC-in: 24 V, 4 A (AC 100-240 V)



Issue date 2023-09-28

Version: 5.0.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Streaming content screen-mirroring requires an HDMI connection (adapter not included). This includes services like Netflix, Hulu, Canal+, Amazon Prime and more. Streaming content services cannot be screen mirrored through Wi-Fi. YouTube can be streamed via Wi-Fi and HDMI.

\* Projectors for direct connection to and for use with an automatic data-processing machine such as a smartphone, laptop, PC, Blu-ray player etc.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.