




Philips PicoPix Max One  
Mobile projector

Up to 120"

Ultra bright and portable  
USB-C video and HDMI  
Built-in speakers and 5 h battery

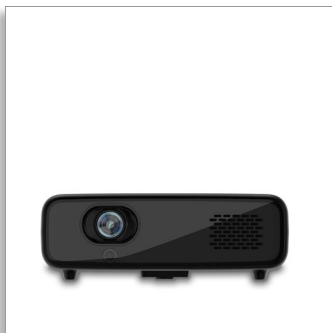

PPX520

## Streaming everywhere, gaming anywhere

PicoPix Max One projects in true Full HD 1080p with lifelike colours thanks to the 4 Ch LED. USB-C video and HDMI connections ready for Apple MacBook and smart devices. Built-in 5 hour battery, electric focus, digital zoom and auto keystone.

### Play, connect, repeat

- Fully Connected (HDMI, USB, USB Type-C)
- PowerBank

### Sound and Mobility

- built-in 5 hour battery for cable-free projection
- Built-in speaker for captivating sound

### True Full HD 1080p

- Advanced LED Light Source
- Compact and Powerful
- Get the perfect image
- True Full HD 1080p resolution

# PHILIPS

Mobile projector  
Up to 120" Ultra bright and portable, USB-C video and HDMI, Built-in speakers and 5 h battery

PPX520/INT

# Highlights

## built-in 5 hour battery for c



Get entertainment on the go with the built-in battery providing up to 5 h of projection.

## Built-in speaker



No need for extra sound systems; the built-in speaker provides the performance you need in a small package.

## Compact and Powerful



Compact, ultra powerful and Apple ready. This is your perfect pocket cinema projector.

## Fully Connected (HDMI, USB, US



Connect all of your favourite devices via HDMI or USB-C Video. The USB port will let you power any smart stick like Amazon Fire TV or Roku for a truly portable experience.

## Get the perfect image



Place it wherever you wish! Keystone, 4 corner correction and digital zoom help eliminate crooked and distorted images for a perfectly proportioned picture even if the device is not straight in front of the wall.

## PowerBank



Charge your smart devices via USB-C thanks to the massive battery.

## True Full HD 1080p resolution



Get a captivating experience in True Full HD 1080 p! Pictures and colours remain lifelike with outstanding full high definition sharpness for text.

## Advanced LED Light Source



The powerful LED light source displays rich, vivid colours and will last up to 30,000 hours. You won't need to replace it as it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp-based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco-friendly device!

# Specifications

## Technology

- Display technology: DLP
- Contrast ratio: 10,000:1
- Resolution: 1920 x 1080 pixels
- Throw ratio: 1.2:1
- Screen distance: 78 cm-320 cm/31"-126"
- Aspect ratio: 16:9
- Focus adjustment: Electrical
- Keystone correction: Auto
- LED lifetime: Up to 30,000 h
- 4 corner correction
- Recommended usage: 120" max in dark room
- Internal battery: up to 5 h

## Connection

- HDMI: x 1
- USB: USB Type-C
- Audio out: 3.5 mm jack

## Sound

- Internal speaker: 2 x 4 W

## Dimensions

- Weight: 0.85kg kg
- packed (W x D x H): 136 x 134 x 47.5 mm

## Standard package includes

- Warranty card
- Remote control
- Quick start guide
- Projector: PicoPix projector
- Power adapter: EU UK US

## Power Supply

- USB powered

## Power source

- Internal battery: 3000 mAh
- Power supply: 5 V 2 A



Issue date 2023-09-28

Version: 5.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.