

Philips Screeneo S4  
Home projector

**Full HD Resolution**

Up to 160"  
LED DLP

**SCN450**



## Project big. Really big

with smart short throw technology

Watch, play, listen, browse! Smart and intuitive, the Screeneo S4 is the best compromise. Supported by an immersive Full HD widescreen and enhanced HDR, the Screeneo S4 throws amazing and super-bright images.

### **Incredible images**

- HDR for advanced contrast and colour
- Perfect image with bespoke adjustments
- Project images up to 160"

### **Play, connect, repeat**

- Built-in Media Player for unlimited binge watching
- Fully Connected for endless possibilities
- Wi-Fi screen mirroring for smart sharing

### **So smart**

- Smart Android OS for apps and more!
- AirMote for comfortable control

### **Bespoke sound**


- Superior Stereo Speakers
- Bluetooth BoomBoxes
- Low fan noise

# PHILIPS

Home projector  
Full HD Resolution Up to 160", LED DLP

# Highlights

## AirMote

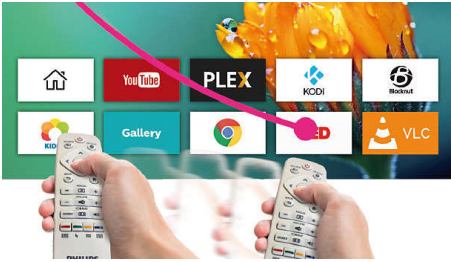

Easily navigate thanks to the intuitive AirMote control by pointing or using gestures to pick and choose what you want to watch.

## Bluetooth BoomBoxes




Play your music directly on the projector. Use your Screeneo as a Boombox by connecting your smartphones or any other Bluetooth device to enjoy big sound.

## Built-in Media Player




Pop your essentials in your hand with the integrated Media Player: Browse, watch all of your videos, listen to your music or share your latest holiday pictures.

## Fully Connected

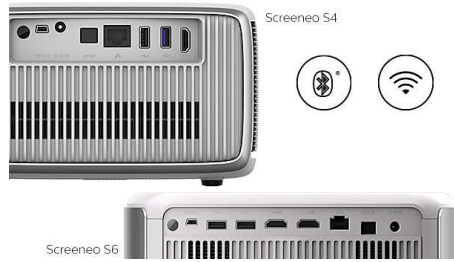


The Screeneo S Collection comes with all the connectivity you need: Wi-Fi, Bluetooth, USB, HDMI, SPDIF; Connect your game consoles, Blu-ray player, smart boxes or set top boxes to enjoy all your contents.

## HDR for advanced contrast

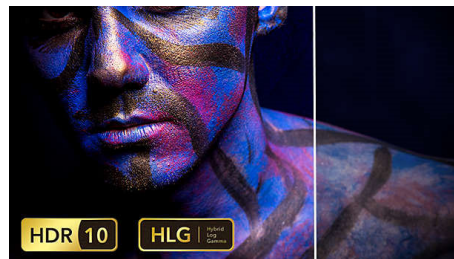

High Dynamic Range is the new video standard that redefines in-home entertainment through advances in contrast and colour. With HDR 10, enjoy a sensory experience that captures the original richness and liveliness, yet accurately reflects the content creator's intent.

## Low fan noise

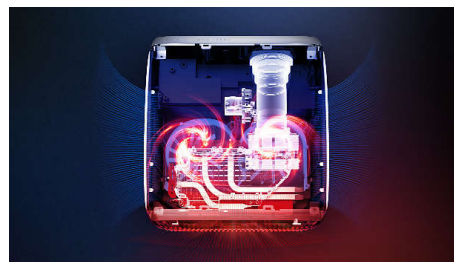

Our all-in-one Screeneo S Collection projectors are designed to dissipate heat through the aluminium side grids along with a state-of-the-art ultra-low-noise fan.


## SCN450/INT

## Perfect image




Get a perfect picture, automatically and straight out of the box with the Auto Keystone, Auto focus. The Digital Zoom will help you to adjust the image size without moving the projector and because you won't always place your projector directly opposite the wall, we added 4 corner correction to fine-tune your image and get a perfect fit even if your device is up to 45 degrees to your right of left side.

## Smart Android OS for apps

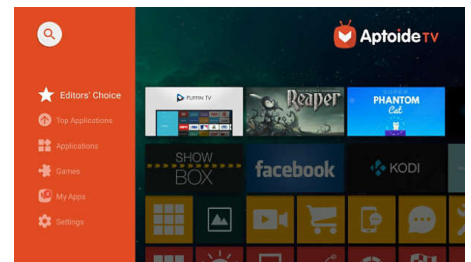

Take full advantage of endless entertainment with Android OS. All your favourite apps are pre-installed out of the box. Enjoy Youtube, Netflix and more!

## Superior Stereo Speakers

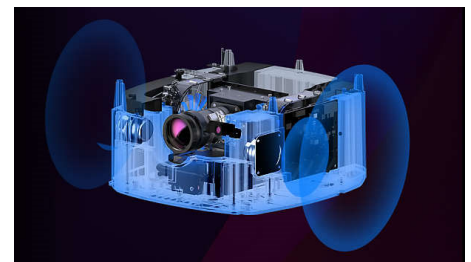

No need for an extra sound bar or home-cinema! The Screeneo S Collection provides endlessly vibrant, clear and powerful sound with deep bass.

# Specifications

## Technology

- Display technology: DLP
- Light source: LED
- Contrast ratio: 100,000:1
- Resolution: 1920 x 1080 pixels
- Throw ratio: 1.2:1
- Aspect ratio: 4:3 and 16:9
- Projection modes: front, rear, ceiling
- Focus adjustment: Auto
- Integrated media player
- Internal memory: 16 GB
- Keystone correction: Auto
- Operating system: Android
- LED lifetime: Up to 30,000 h
- Projection image size: up to 400 cm (160")
- Projection distance: 26 cm - 457 cm/10"-180"
- 4 corner correction

## Connection

- Wi-Fi: 802.11a/b/g/n/ac 2.4+5GHz, Wireless screen mirroring

- Bluetooth: Bluetooth 4.0, Boombox feature, Connect external speaker
- Connectivity: USB x 2 (3.0) (2.0), HDMI x 1, RJ45, S/PDIF

## Sound

- Stereo Speaker: 2 x 5 W
- Bluetooth speaker connection

## Logistic data

- Standard package includes: Projector, Remote control, 2 x AAA battery, Power cable, Quick start guide, Warranty card
- Weight: 1.84 kg / 4.06 lb
- Dimensions (W x D x H): 192 x 192 x 110 mm/7.5 x 7.5 x 4.3 inch

## Power source

- Power consumption: Operation: 150 W, Stand by <0.5W
- Power supply: AC 100-240 V, DC 19.5 V/7.8 A



Issue date 2023-09-28

Version: 4.4.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Projectors for direct connection to and for use with an automatic data-processing machine such as a smartphone, laptop, PC, Blu-ray player etc.