


Philips Ultinon Drive  
Accessory  
Wiring harness kit for 1  
LED lamp

Position light function wire  
4-pin female DT connector plug  
Reliable Philips quality

LUMUD1003WX1

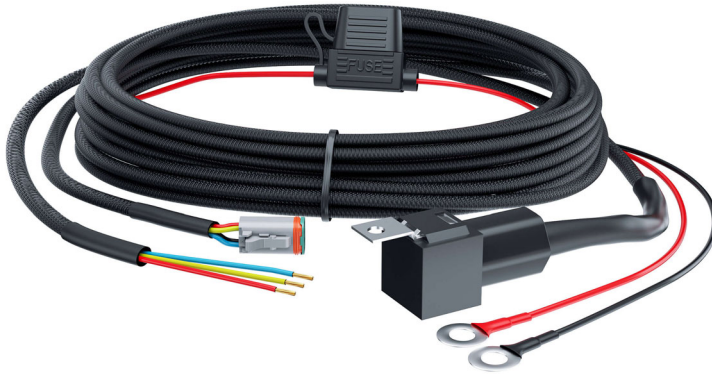

## Enhanced durability and reliability

Reliable installation for long-lasting performance

Ensure smooth installation of a single Philips LED driving light, with automotive-grade cables and waterproof sealed components, for long-lasting LED light performance. Being PVC / BFR free\*\*, this kit is gentler on the environment.

### Optimal fit

- Easy to install
- For a single LED lamp with position-light function

### Reliable Philips automotive quality

- Durable material for long-lasting performance

**PHILIPS**

Wiring harness kit for 1 LED lamp  
Position light function wire 4-pin female DT connector plug, Reliable Philips quality

LUMUD1003WX1/10

# Specifications

## Product description

- Technology: LED wiring harness kit
- Compatible with: Philips Ultinon Drive UD5101L, UD5102L, UD5103L, UD5104L, UD7050L, UD5001R, UD5101R
- Plug type: 4-pin DT connector female plug
- Cable length: 3m cable
- Fuse: 5A, 10A, 15A
- Parking position light wired
- Relay: Yes, 12V
- Switch functions
- Switch On/Off
- Number of connector plug: 1

## Electrical characteristics

- Voltage: 12 V

## Ordering information

- Order entry: UD1003WX1
- GOC: 01854032

## Packaging Data

- EAN1: 8719018018540
- EAN3: 8719018018557

## Packed product information

- MOQ (for professionals): 12
- Box dimensions-L(mm): 610
- Box dimensions-W(mm): 105
- Box dimensions-H(mm): 90

# Highlights

## Easy to install

When installing Philips LED auxiliary light\* on your vehicle, you may need an additional wire harness to securely connect and control the extra LED driving lights. This Philips LED wiring kit makes it easy to connect your Philips LED driving light to your vehicle's electrical system, giving you complete control over your new lamp.

## Single lamp wiring harness kit

Includes 4-pin waterproof female DT connector plug, 3m cable, on/off switch, function switch, 12V relay, 5A, 10A and 15A fuses.

## Long-lasting performance

This Philips LED wiring kit uses durable automotive-grade cables with a waterproof sealed relay, switch and connectors. It has been tested in the toughest conditions so you can enjoy long-lasting performance.



Issue date 2023-10-02

Version: 3.3.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compatible with: Philips Ultinon Drive UD5101L, UD5102L, UD5103L, UD7050L, UD5001R \*Restriction of Hazardous Substances regulation, in electrical and electronic equipment. \*\*Exempt of Polyvinyl Chloride (PVC) and Brominated Flame Retardants (BFRs)