

PHILIPS

Series 9000

All-in-One Trimmer

15in1: face, head & body

Precision trimming comb

BeardSense technology

Premium stainless steel handle



MG9551/65

Stainless steel precision

For a perfect beard, hair & body trim

Craft your personal look with this premium stainless steel trimmer, which includes 15 quality tools for styling your face, head and body. The precision trimming comb delivers a precise trim at the exact length you want.

Ultimate precision: even trim and sharp edges

- Even trim in one pass
- A trimmer that adjusts to your beard
- Long lasting performance for precise results

Versatile styling for face, head and body

- Get the details right
- All-in-one for face, head & body
- Your haircut at home
- Get an even trim and sharp edges
- Say goodbye to body hair

Quality & Ease of use

- Always know when it's time to charge
- Runs 4 weeks on a single charge*
- Water-resistant for convenient use and easy cleaning
- Premium stainless-steel handle


Highlights

Precision trimming comb



The patented trimming comb offers 11 length settings between 1-3 mm, so you can achieve an even trim at the exact length you want.

Self-sharpening steel blades

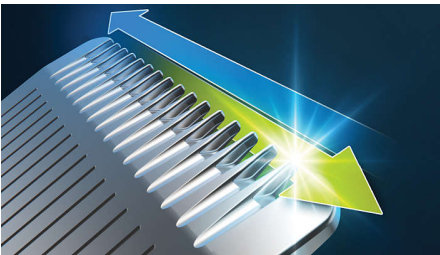

The trimmer's stainless steel blades remain sharp as day one for long lasting performance. No oil required.

BeardSense technology



The trimmer scans the beard density 125x per second and boosts power exactly when you need it to tackle also dense, bushy or longer beards.

15in1 trimmer



This all-in-one trimmer offers 12 tools for all your grooming needs. Conveniently trim and style your facial hair, clip your hair and groom your body.

Precision beard styling



The trimmer and its multi-comb set offer 17 length settings from 0.5 to 16 mm in up to 0.2 mm precision steps for shorter and longer beard styles. The narrow design of the precision trimmer attachment makes it easy to create sharp edges and fine details. The metal trimmer attachment cleans up cheeks, chin and neck to finish your look.

Comfortable body grooming



Shave comfortably below the neck with our body shaver attachment. A unique skin-protection system guards sensitive areas while you shave as close as 0.5 mm. You can also trim body hair with the two click-on combs.

Easy hair clipping



With the trimmer's multi-comb system you can choose length settings between 0.5 - 16 mm to create your hairstyle at home.

Nose/ear/eyebrow trimming



The nose/ear trimmer attachment removes unwanted nose and ear hair quickly and safely. Easily keep your eyebrows neat and tidy with the dedicated eyebrow comb.

Up to 120 minutes of runtime



A powerful lithium-ion battery provides up to 120 minutes of runtime with 5-minute quick charge option for long life and maximum power.

Specifications

Power

Battery type: Lithium-ion

Run time: Up to 120 minutes

Charging: 60 minutes, 5 min quick charge

Charging method: USB-A (no adapter included)

Maximum power consumption: 5 W

Input Voltage: 5 V

Design

Handle: Ergonomic rubber grip

Service

2-year warranty

Ease of use

Display: Battery low indicator, Battery full indicator, Battery charging indicator

Maintenance free: No blade oil required

Wet & Dry: 100% shower proof

Operation: Cordless use only

Versatile styling

Styling tools: Steel trimmer, Nose and ear trimmer, Body shaver with skin protector, Steel precision trimmer, Precision trimming comb, 3

beard combs, 3 hair combs, 2 body combs, Eyebrow comb

Accessories: Soft pouch, Cleaning brush, USB-A (adapter not included)

of attachments: 15

Precise trim

Cutting performance: Self-sharpening steel blades, BeardSense technology

Precision trimming: Precision trimming comb

Length settings: 17 (0.5 - 16 mm)

Precision steps: Up to 0.2 mm

