

Philips NeoPix 122  
Home Projector

### Beautiful display

Wi-Fi connection  
Punchy Sound  
Deep Silence

NPX122/INT



## Smartly Designed, get well in your interior

NeoPix 122 offers an enjoyable 720p HD image up to 65". Compact, with a large choice of connectors (HDMI, USB) as well as Dual band Wi-Fi screen mirroring. Built-in media player for movies, pictures and even music, combined with a 2.1 speak

#### Effortless Connections

- Smart Wi-Fi screen mirroring
- Built-in media player
- NeoPix 122 Connection

#### Beautiful display

- NeoPix 122 in True HD 720p
- Extended image correction
- Advanced LED Light Source

#### Deep silence and punchy sound

- 2.1 Powerful sound system
- Super silent

# PHILIPS

# Highlights

## NeoPix 122 in True HD 720p




Dive into the captivating world of True 720p HD with the NeoPix 122, perfect for enjoying your favourite movies and TV shows on a 65" screen in your bedroom. Benefit from the short throw engine, designed to minimise projection distance and create an even larger picture when just 2 metres away from the wall. The NeoPix 122 comes equipped with an integrated stand screw, ready for effortless ceiling mounting.

## 2.1 Powerful sound system



Thanks to its 2.1 audio system (two speakers and a subwoofer), immerse yourself in an exceptional sound sensation. Thanks to its 3.5mm jack output, connect your earphones for even bigger sound with speakers.


## Smart Wi-Fi screen mirroring

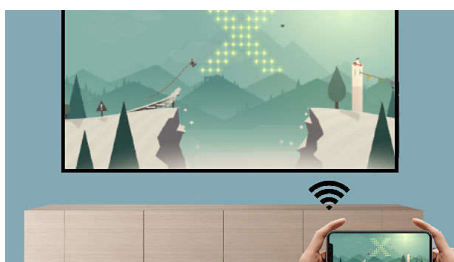

Connect your mobile devices such as tablets, smartphones or even computers wirelessly to mirror and share your contents. Videos on your phones? No worries, just cast it through

Wi-Fi! (IOS, Android, Mac and PC). With the Dual band (2.4 and 5GHz), your connection will get even more stable and faster for smoother playback.

## Super silent

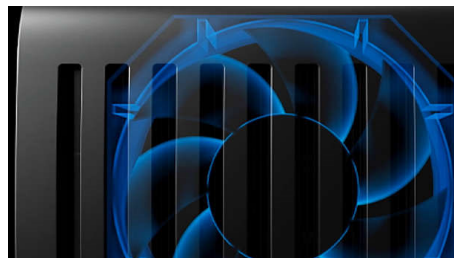


Fully engineered to improve airflow and heat dissipation while maintaining a compact design. Enhanced by the use of high-performance fans, it offers an unprecedented silence.

## Extended image correction



Position the product where you prefer! Keystone correction and digital zoom technology will enable you to fine-tune the image to your exact needs and place the projector at almost any distance. With the noise-reduction technology, adjust your image for lifelike videos or for watching films as if you're sitting in a cinema

## Built-in media player

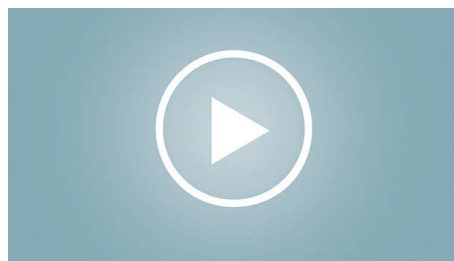

Thanks to the integrated media player, you have everything at your fingertips: browse and

watch all your videos, listen to your music or project your latest holiday photos. Just plug in your USB Stick or hard drive to enjoy all your local content.

## NeoPix 122 Connection



Connect any media device: set-top boxes, computers, game consoles and streaming boxes such as a Fire Stick or Apple TV thanks to its built-in USB and HDMI ports. Enough of wires! Connect your smart dongles (Amazon Fire Sticks, Roku...) to the USB power output (5V2A) and get rid of an external adapter.

## Advanced LED Light Source



The powerful LED light source displays rich, vivid colours and will last up to 30,000 hours. You won't need to replace it as it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp-based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco-friendly device!

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Brightness: up to 100 lumens\*
- Contrast ratio: 3000:1
- Resolution: 1280 x 720 pixel
- Throw ratio: 1.47:1
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Integrated media player
- Keystone correction: Manual
- LED lifetime: Up to 30,000 h
- Projection image size: up to 65" (165 cm)
- Projection distance: 65" @ 83" distance (212 cm)
- Resolution supported: 1920 x 1080 pixels
- Recommended usage: 65" max in dark room

## Connection

- Wi-Fi: Dualband 2.4 GHz and 5 GHz

- HDMI: x 1
- USB: x 1
- Audio out: 3.5 mm jack
- DC-IN: DC jack

## Sound

- Stereo Speaker: 2 x 5 W
- 2.1
- Surround mode, Equalisation

## Dimensions

- Weight: 1.89lbs / 0.85kg kg
- unpacked (W x D x H): 225 x 190 x 102 mm / 8.86 x 7.46 x 4.02 inch

## Power source

- Power consumption: Operation: 42 W, Stand by <0.5W
- DC-in: 12 V, 3.5 A (AC 100-240 V)



Issue date 2023-10-02

Version: 1.1.1

EAN: 76 40186 96013 7

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Colour brightness (colour light output) and white brightness (white light output) will vary depending on projector settings. Colour light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.