

Philips
DVD player with USB

DivX

DVP3252



Straight from USB to TV

with Hi-Speed USB 2.0 Link

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Progressive Scan component video for optimised image quality

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays media from USB flash drives

Easy to use

- Create MP3s directly from CDs


Plays all your movies and music

- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- DivX Certified for standard playback of DivX videos

PHILIPS
sense and simplicity


Highlights

Plays it all

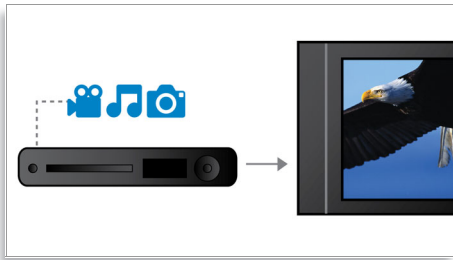


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

192 kHz/24-bit audio DAC

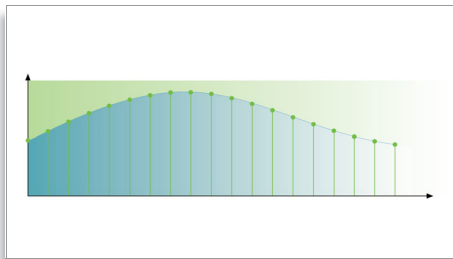

192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Progressive Scan

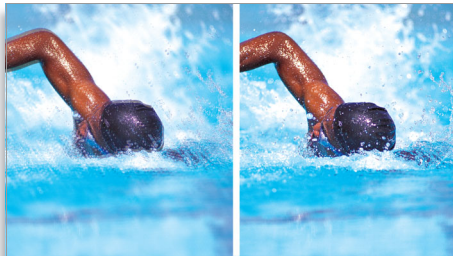

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture.




Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Create MP3s



Convert the contents of your favourite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

Hi-Speed USB 2.0 Link

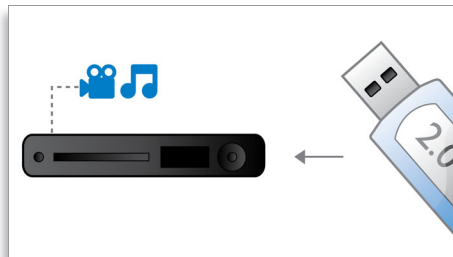

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: > 90
- Distortion and Noise (1 kHz): > 65 dB
- Crosstalk (1 kHz): > 70 dB
- Dynamic Range (1 kHz): > 80 dB
- Sound System: Dolby Digital, DTS

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Flip photos, Rotate, Zoom, Slideshow

Connectivity

- Rear Connections: Digital coaxial out, Composite video (CVBS) output, ComponentVideo out
- Progressive, Analogue audio multi-channel out
- Front/Side connections: USB

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Simplified Chinese

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1 W

Accessories

- Included Accessories: Audio/Video cable, 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User manual

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 209 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3



Issue date 2009-05-05

Version: 1.0.5

12 NC: 8670 000 41814
EAN: 87 12581 43927 9

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com