

Philips  
DVD player with HDMI  
and USB

**HDMI 1080p**

DivX Ultra Karaoke

**DVP596K**



## The one to hook up to your HDTV

With high-def HDMI 1080p

Be impressed with this Philips DVD player with HDMI digital video and audio connection. Step into another home entertainment arena as you immerse yourself in High Definition video (720p/1080i/1080p).

### **Brings audio and video to life**

- HDMI 1080p upscales to high definition for sharper pictures
- 5.1 channel audio output for surround sound

### **Plays all your movies and music**

- DivX Ultra Certified for enhanced playback of DivX videos
- Windows Media Video playback for movies from your PC
- Plays WMV, DivX, WMA, MP3 and HD JPEG photos

### **Enjoy enhanced karaoke**

- Karaoke scoring for fun and exciting song contests at home

### **Connect and enjoy multiple sources**

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### **Easy to set up and use**

- One-touch MP3 creation directly from CDs onto USB sticks
- EasyLink controls all EasyLink products with a single remote

**PHILIPS**  
sense and simplicity

# Highlights

## DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again


ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

## 5.1 channel audio output

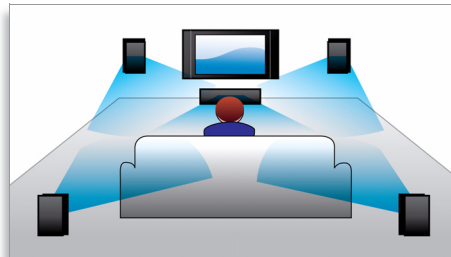


5.1 channel audio output for surround sound

## EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Hi-Speed USB 2.0 Link

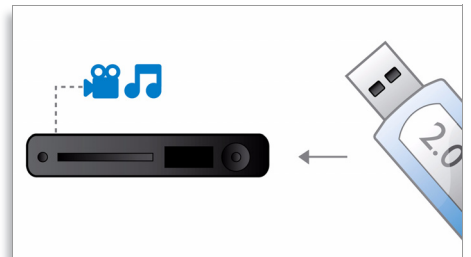

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling, High Def (720p, 1080i, 1080p), Smart Picture, Video upscaling

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 65 dB
- Crosstalk (1 kHz): 70 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital, DTS

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DivX, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: PCM, MP3, Dolby Digital, WMA, DTS
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom,

High Definition Resolution, Slideshow with MP3 playback

## Connectivity

- Front/Side connections: Microphone
- Rear Connections: Composite video (CVBS) output, Digital coaxial out, Component Video out Progressive, Analogue audio multi-channel out, HDMI output

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Simplified Chinese
- Karaoke: MIC volume

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 12 W
- Standby power consumption: < 0.8 W

## Accessories

- Included Accessories: Audio/Video cable, Quick start guide, World Wide Warranty leaflet, Remote Control, 2 x AAA Batteries, User Manual, Warranty Leaflet

## Dimensions

- Set dimensions (W x H x D): 435 x 38 x 210 mm
- Packaging dimensions (W x H x D): 490 x 82 x 296 mm

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3



Issue date 2009-08-06

Version: 1.0.4

12 NC: 8670 000 38607  
EAN: 87 12581 40917 3

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)