



Philips  
Clock Radio

### Time projection

FM, Digital tuning  
Dual alarm  
Battery or AC operated

AJ4800

# Wake up and beam!

with time projection

Every day is unique for you, the friendly Philips clock radio makes a special morning companion. Its time projection feature beams the time on any surface - just wake up, open your eyes and you'll see the time. Each morning just gets better

#### **Breezy, easy mornings start with time projection**

- Time Projection for an eye-opening way to tell the time
- Rotate & reverse the projection image for easy viewing
- Large backlit LCD display for easy viewing in low light

#### **Start the day your way**

- FM tuner for radio enjoyment
- Digital tuning with preset stations for extra convenience
- Gentle wake for a pleasant wake up experience
- Sleep timer for easy falling asleep to your favorite music
- Repeat alarm for additional snooze
- Dual alarm to wake you and your partner at different times

# PHILIPS

# Highlights

## Time Projection

Time Projection lets you project the time on any surface at any angle. The innovative projection system ensures that the time will always be positioned and orientated correctly. Unlike conventional LCD displays, the negative LCD display allows light to pass through without significant distortion. A powerful LED luminously lights up the negative LCD to project the light within a certain distance. With its accurate lens, the clock projects the image and even adjusts the focus to your satisfaction. No need to get up and check the time - just open your eyes!

## Rotate & reverse the image

Rotate & reverse the projection image for easy viewing

## FM tuner

The built-in FM tuner lets you enjoy your favorite songs or news from your radio station every day. Simply tune into the station that you want to listen.

## Digital tuning with presets

Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.


## Large backlit LCD display

Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

## Gentle wake

Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

## Sleep timer

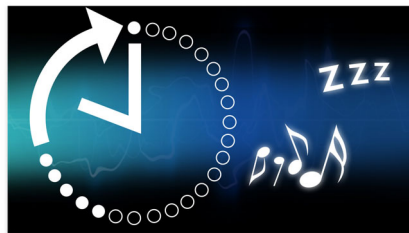


Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep, or worrying about wasting power

## Repeat alarm

To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.

## Dual alarm

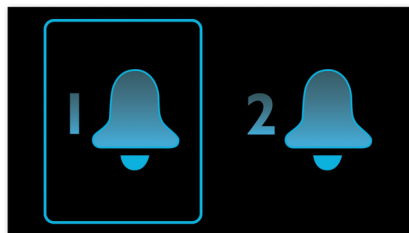

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

# Specifications

## Clock

- Type: Digital
- Time format: 12H, 24H
- Display: LCD

## Alarm

- No. of alarms: 2
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins
- Snooze (repeat alarm): Yes, 9mins

## Tuner/Reception/Transmission

- Antenna: FM Antenna
- Tuner Bands: Digital tuning, FM
- Frequency range: 87.5 - 108 MHz
- No. of preset stations: 20

## Convenience

- Alarms: Buzzer Alarm, Radio Alarm, Dual alarm time, Repeat alarm (snooze), Gentle Wake
- Sleep Timer
- Display brightness: High/Mid/Low/Off
- Volume control: Up/ Down
- Backlight color: white
- Clock enhancements: time projection

## Power

- Power supply: 100-240VAC, 50/60Hz
- Battery type: AA size (LR6)
- Number of batteries: 4
- Power type: AC Input, battery-operated
- Battery voltage: 1.5 V

## Dimensions

- Packaging type: D-box
- Product dimensions (WxDxH): 76.4 x 100 x 103.5 mm
- Net weight: 0.27 kg
- Packaging dimensions (WxDxH): 210 x 131 x 98 mm
- Gross weight: 0.363 kg

## Accessories

- Included accessories: AC-DC Adapter, Quick start guide, User Manual, Warranty certificate

## Loudspeakers

- Built-in speakers: 1



Issue date 2017-05-16

Version: 2.0.5

12 NC: 8670 001 33477  
EAN: 48 95185 61941 5

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)