



Philips
5.1 DVD Home theater

Bluetooth
HDMI ARC & USB
Karaoke

HTD3520

Powerful surround sound from compact speakers

Pump up your home entertainment experience with the Philips home cinema system. Exposed speaker drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback
- Karaoke for endless singing entertainment at home
- Bluetooth wireless music streaming from your music devices

PHILIPS


Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Dolby Digital

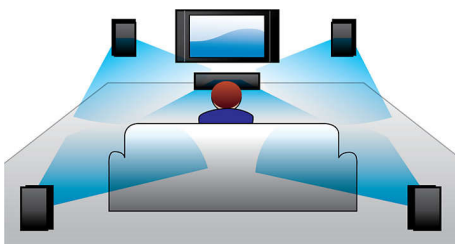

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment

simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke for endless singing



Karaoke for endless singing entertainment at home



Specifications

Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Cube speaker output power: 5 x 50 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Cube speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Audio in
- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Fixed FM Antenna, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Outer Carton

- EAN: 48 95185 60255 4
- Length: 46.7 cm
- Number of consumer packagings: 1
- Width: 37.6 cm
- Gross weight: 7.58 kg
- Height: 34.1 cm
- Nett weight: 6.45 kg
- Tare weight: 1.13 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Power

- Power consumption: 50 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: ≤ 0.5 W

Packaging dimensions

- Height: 34.1 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 46.7 cm

- Depth: 37.6 cm
- Number of products included: 1
- EAN: 48 95185 60255 4
- Gross weight: 7.58 kg
- Nett weight: 6.45 kg
- Tare weight: 1.13 kg

Product dimensions

- Height: 5.5 cm
- Width: 36 cm
- Depth: 33.5 cm
- Weight: 2.21 kg

Accessories

- Included accessories: HDMI cable, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, AAA Battery (x1)

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Front Speaker cable length: 2.2 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker cable length: 7.2 m
- Subwoofer cable length: 2.2 m

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: mp3, wma
- Video: avi, divx, mpeg, mpg
- Picture: JPEG, BMP, GIF

Picture/Display

- Picture enhancement: Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Still Picture Playback

- Picture Compression Format: BMP, GIF, JPEG, TIFF
- Picture Enhancement: Rotate, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2



Issue date 2024-05-02

Version: 3.0.2

EAN: 48 95185 60255 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.