



Philips Fidelio SoundHub
2.1 Home cinema speakers
with 360Sound

Silver

SoundHub



CSS9211

Simply add cinematic surround sound to your TV

Obsessed with sound

Simply upgrade the sound of your TV with Philips SoundHub home cinema speakers CSS9211. The 360Sound speakers are designed with sound drivers in the front and on the sides to fill your room evenly with surround sound, just like a cinema.

Cinematic surround sound from all angles

- 360Sound delivered via front and side firing speaker drivers
- Powerful active subwoofer for a real cinema experience
- Dolby Digital and DTS for great surround sound

Designed to enhance your cinema at home

- Sophisticated design with high-quality aluminium finishing

Simply enjoy all your entertainment

- Easily connects to your TV with a single cable
- Connect additional AV devices via multiple audio connections
- Audio-in to enjoy music from iPod/iPhone/MP3 player


PHILIPS
Fidelio

Highlights

360Sound


Vastly different from conventional 2.1 home cinema speakers, 360Sound speakers are uniquely designed with three drivers in each satellite speaker—a front one and two side firing ones—which are angled to project immersive sound around you. In addition to the principle of dipoles, Philips uses a proprietary algorithm to further enhance the embracing sound effect. Built with premium acoustic components like soft dome tweeters, Neodymium magnets and Class D digital amplifiers, 360Sound delivers exceptional sound from all angles — giving you a true cinema experience in your own home.

Easily connects to your TV

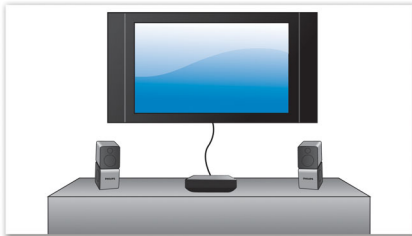

Easily connects to your TV with a single cable


Connect additional AV devices

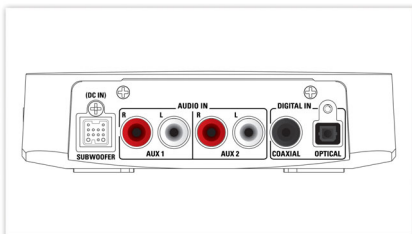

To enjoy cinematic surround sound for all your entertainment you can easily connect

additional Audio/Video devices to your SoundHub home cinema speakers. Connect, for example, a Blu-ray or DVD player or a games console by using one of the available digital or analogue connections: Optical in, Coaxial in or 2 AUX-in. You can also connect your MP3 player using the Music iLink connection on the side.

Sophisticated design

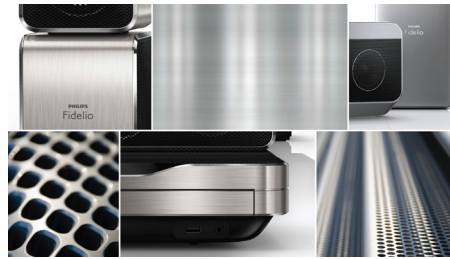


Aluminium is a statement of creative intent that is the modern medium of choice for many top interior designers worldwide. Lightweight yet strong, aluminium is an authentic material that helps create truly iconic designs whose ultra-thin and robust profiles perfectly showcase engineering excellence. The end result is Home theatres that are sure to catch eyes and turn heads in any room.

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Dolby Digital and DTS

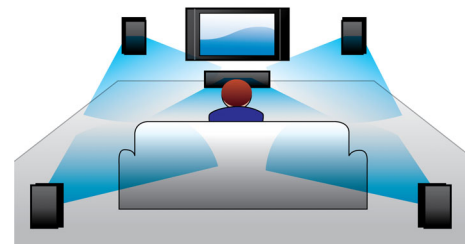

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Powerful active subwoofer

Powerful active subwoofer for a real cinema experience

Specifications

Sound

- Equalizer settings: Auto, Gaming, Movie, Music, News, Original
- Sound Enhancement: Auto Volume Leveller, Dialogue Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, MP3 Sound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Satellite speaker output power: 150 W x 2
- Subwoofer output power: 100 W
- Total Power RMS @ 30% THD: 400 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 1" Soft dome tweeter, 1 x 2.5" woofer, 2 x 2.5" full range woofers
- Satellite speaker impedance: 6 ohm
- Satellite speaker freq range: 150–20k Hz
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 4 ohm

Connectivity

- Front/Side connections: Music iLINK
- Rear Connections: AUX IN 1, AUX IN 2,

- Subwoofer out, Digital coaxial in, Digital optical in
- Subwoofer connections: Speaker sockets

Power


- Power consumption: 55 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5

Dimensions

- Main Unit (W x H x D): 150 x 40.6 x 126 mm
- Main Unit Weight: 0.4 kg
- Satellite Speaker (W x H x D): 99 x 247 x 117 mm
- Satellite Speaker Weight: 1.2 kg
- Satellite Speaker Cable length: 5 m
- Subwoofer (W x H x D): 196 x 392 x 357 mm
- Subwoofer Weight: 6.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 560 x 258 x 610 mm
- Weight incl. Packaging: 14.2 kg

Accessories

- Compatible accessories: STS9501 Speaker stands, STS9510 Wall mount brackets
- Included accessories: 2 x AAA Batteries, Digital Optical cable, Music iLINK Cable, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

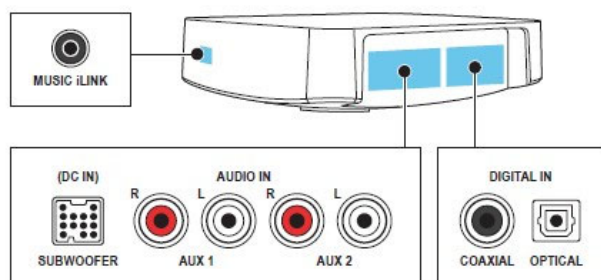

Issue date 2015-04-02

Version: 9.3.11

12 NC: 8670 000 78522
EAN: 87 12581 60876 7

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

