



Philips Fidelio  
Headphones with mic

### High-resolution audio

In-ear  
Ultra-soft silicone caps  
Flat cable



S2LB

## High fidelity, premium quality

Wherever you go

Philips Fidelio S2 headphones are precisely engineered to deliver natural, balanced sound, revealing every detail as the artist intended. Amazing sound presented in a lightweight yet durable design for true comfort and pleasure on the go.

### Designed for precision

- High-resolution audio reproduces music in its purest form
- Layered motion control drivers for refined high frequencies
- High-powered 13.5-mm neodymium drivers for exceptional sound
- Engineered metal housing reduces vibration and resonance
- Handpicked, tuned and tested drivers for a precise match

### Listen in comfort

- Copper alloy outer housing for lightweight durability
- Anti-scratch high gloss coating for added protection
- Ergonomic earphones fit perfectly while dispersing pressure
- 2 Comply™ Foam Tips for a comfy fit and noise isolation
- Ultra-soft silicone tips in 5 sizes for a custom, snug fit

### Created for convenience

- Switch between music and calls with in-line control and mic
- Durable flat cable keeps your headphones tangle-free



**PHILIPS**  
Fidelio

Headphones with mic  
High-resolution audio In-ear, Ultra-soft silicone caps, Flat cable

S2LB/00

# Highlights

## High-resolution audio




High-resolution audio offers the best in audio performance, reproducing original studio master recordings more faithfully than 16 bit/44.1 kHz CD formats. This uncompromising quality makes high-resolution audio the best sound companion for the music lover. Fidelio headphones meet the stringent standards required for the Hi-Res Audio stamp of quality. Whether you are enjoying your Hi-Res collection or a more traditional music source, the smooth extended high frequencies of the Fidelio headphone range help you get more from your music.

## 13.5-mm neodymium drivers




Each speaker driver is carefully handpicked, tuned and tested before being paired to ensure delivery of the most balanced, natural sound. The 13.5-mm drivers utilise high-power neodymium magnets to deliver deep bass impact, transparent mid-range and refined high frequencies.

## Copper alloy outer housing

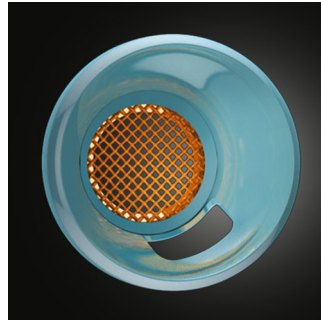

Copper alloy outer housing for lightweight durability

## Engineered metal housing

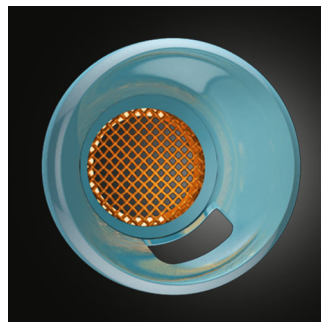

The metal housing is meticulously engineered to reduce resonance and vibration, delivering authentically precise sound marked by incredible sound detail.

## Handpicked, tuned and tested



Each speaker driver is specially tested and handpicked for ideal stereo pairs, together


delivering superbly deep bass, transparent mid-range and refined high frequencies.

## High gloss coating



The ergonomically designed ear shell is protected by a high-gloss finish, which imparts not only a premium look and feel but also durability and resistance to scratches. The protective coating makes the earphones easy to clean and even easier to bring along with you anywhere you go. Just give them a wipe and they'll look as good as new.

## In-line control and mic

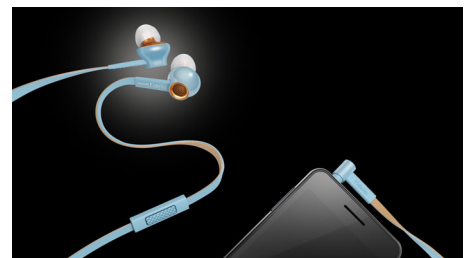

The Fidelio S2 in-ear headphones feature an in-line remote and microphone so you can switch easily between your music and calls. Stay connected with important people – and your music, always.

# Specifications

## Sound

- Acoustic system: Semi-closed
- Frequency response: 5–40 000 Hz
- Sensitivity: 107 dB
- Speaker diameter: 13.5 mm
- Maximum power input: 40 mW
- Impedance: 22 ohm

## Accessories

- Storage pouch

## Connectivity

- Cable Connection: 3.5 mm 4 pole (1.2 M)
- Compatible with:: iPhone®, BlackBerry®, HTC, LG, MOTOROLA, Sony, Nokia\*, SAMSUNG\*.  
\*Extra connector available through customer support for Sony Ericsson and older models from NOKIA and SAMSUNG



Issue date 2015-11-01

Version: 7.0.3

12 NC: 8670 001 08924  
EAN: 06 92341 07246 08

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)