



Philips
Blu-ray Soundbar Home
theater with Ambisound
technology

3D Blu-ray
Wall mountable



HTB7150K

Great surround sound without the clutter

Obsessed with sound

Totally free of messy clutter, our patented Ambisound technology delivers rich, cinema-like multi-channel 5.1 surround sound in any room. What's more, it has 4 dedicated amplifiers and 4 loudspeakers that sounds great just anywhere.

Ultimate listening experience

- Ambisound technology for surround sound from fewer speakers
- 480W RMS power delivers great sound for movies and music

Designed to enhance your living space

- SoundBar design best fitting a 102cm (40") flat TV or larger
- Super slim design of 87mm depth ideal for wall mounting


Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Karaoke for endless singing entertainment at home
- Built-in Wi-Fi to enjoy your connected media wirelessly
- CinemaPerfect HD for clearer and sharper video playback
- Instant 2D to 3D conversion for a lifelike movie experience

PHILIPS

Highlights

Ambisound technology

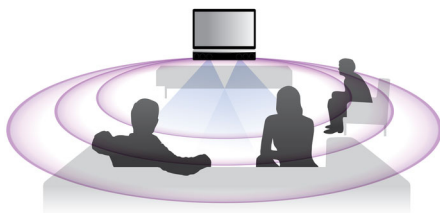

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left

lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Karaoke for endless singing



Karaoke for endless singing entertainment at home

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a

depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

480W RMS power

480W RMS power delivers great sound for movies and music

Specifications

Sound

- Philips Branded feature: Ambisound
- Equalizer settings: MySound, Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Subwoofer output power: 120 W
- Surround speaker output power: 4 x 90 W
- Total Power RMS @ 30% THD: 480 W

Loudspeakers

- Loudspeaker types: 4 Integrated surround speakers, Integrated with main unit
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Connectivity

- Integrated Connections: Wi-Fi
- Side Connections: Music iLink/Mic In, USB
- iPod/iPhone: Ready (Dock sold separately), via 3.5mm Music iLink
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- MyRemote App: MySound, SimplyShare, Virtual Remote

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Internet Radio

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, flv, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Design

- Wall mountable

Power

- Power consumption: 80 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.25 W

Sustainability

- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 927 x 150 x 87 mm
- Main Unit Weight: 4.57 kg
- Subwoofer (W x H x D): 196 x 393.5 x 300 mm


- Subwoofer cable length: 4 m
- Subwoofer Weight: 4.51 kg
- Packaging (W x H x D): tbc mm
- Weight incl. Packaging: 14.9 kg

Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

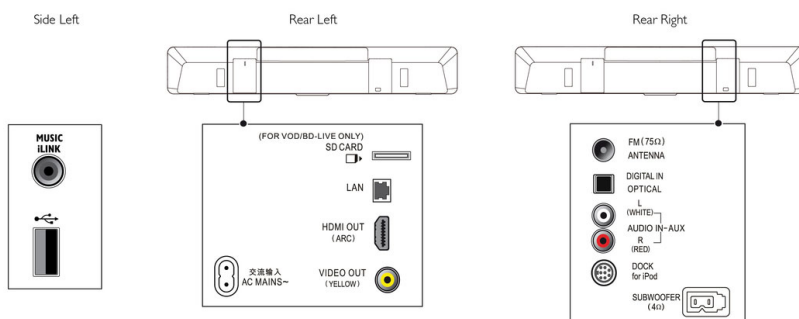

Issue date 2020-07-08

Version: 8.3.3

12 NC: 8670 000 91288
EAN: 87 12581 64886 2

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com