



Philips
CD Soundmachine

Bluetooth® and NFC
USB



AZ1890T

Enjoy powerful music wirelessly wherever you go

The Philips Portable CD Sound Machine is a powerful sound system you can take with you everywhere. It frees your music with wireless One-Touch NFC connectivity for effortless Bluetooth pairing. Or play back your tunes on USB, CD and MP3-CD.

Enjoy your music from different sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- More music with Digital FM radio with 20 stations preset

Easy to use

- Handy remote control for extra convenience
- Stereo headphone jack for better personal music enjoyment
- Audio-in for easy portable music playback

Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound
- 10W RMS total output power

PHILIPS


Highlights

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

NFC technology

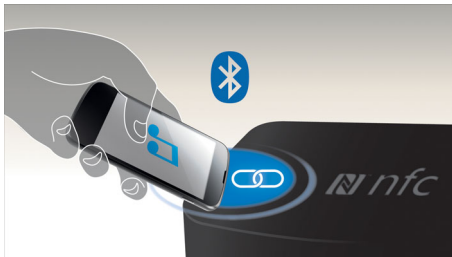

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

USB Direct for MP3 music

USB Direct for MP3 music playback

Play MP3-CD, CD and CD-R/RW



MP3 stands for "MPEG 1 Audio layer-7.6 cm (3")". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Specifications

Bluetooth® wireless technology

- Profiles: A2DP, AVRCP

Audio Playback

- Bluetooth mode: Play/Pause, Previous/Next
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Album Search, Next/Previous Track Search, Program Play, Repeat Play, Shuffle Play
- Loader Type: Front
- Playback Media: CD, CD-R/RW, MP3-CD
- Programmable Tracks: 20

Connectivity

- USB: USB host
- Audio/Video output: Headphone (3.5mm)
- Audio in (3.5mm)

Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM
- Station presets: 20
- Tuner enhancement: auto digital tuning

Sound

- Volume control: up/down
- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Output Power: Total 10W Max.

Loudspeakers

- No. of built-in speakers: 2
- Loudspeaker enhancement: bass reflex speaker system

Convenience

- Display Digits: 6
- Display type: LCD display
- Backlight color: blue

Accessories

- Remote control: 12-key with lithium battery
- Others: User Manual
- World Wide Warranty leaflet

Power

- Power supply: 220 - 240 V
- Battery type: C size (LR14)
- Number of batteries: 6
- Battery voltage: 1.5 V

Dimensions

- Packaging width: 561 mm
- Packaging height: 275 mm
- Packaging depth: 159 mm
- Gross weight: 3.5 kg
- Main unit depth: 132 mm
- Main unit height: 214 mm
- Main unit width: 451 mm
- Weight: 2.5 kg



Issue date 2014-07-16

Version: 1.0.4

12 NC: 8670 001 14403
EAN: 87 12581 72008 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com