




Philips Fidelio
Wireless multiroom music
system

CD, MP3-CD, USB, FM
Bluetooth®

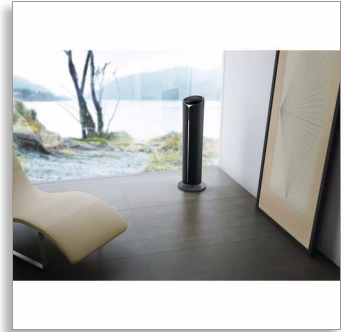

BM90

One tap to play music in every room

Philips izzy music system plays music via Bluetooth, CD/USB & FM. With a tap of button, music from smartphones, CD/USB & radio stations will play simultaneously to any izzy speaker in any room. Easy setup with no router, password or app.

Enrich your sound experience

- 200W RMS total output power
- 3.1 speaker system with a built-in subwoofer
- Pure digital processing technology for best sound clarity
- LivingSound for wider, immersive stereo sound
- Digital Sound Control for optimized music style settings

Enjoy your music from multiple sources

- Digital tuning with preset stations for extra convenience
- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback

Philips izzylink™ for multiroom music


- Group up to 5 izzy with izzylink™ for multiroom enjoyment
- One tap to set up izzylink™, no router, no password, no apps
- Stream all your music via izzylink™
- Play music in one room wirelessly via Bluetooth



PHILIPS
Fidelio


Highlights

izzylink™

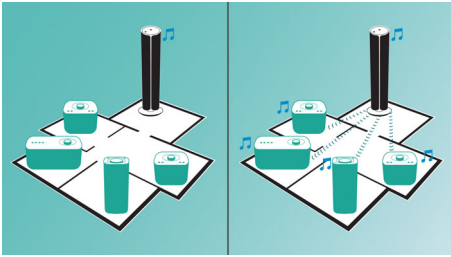


izzylink™ is a wireless technology that uses the IEEE 802.11n standard to enable the link-up of multiple speakers to form a wireless network. The network connects up to five speakers without the need of a router, Wi-Fi password, or any smart device mobile app to set it up. You can add izzy speakers to the network easily to enjoy music playing at the same time in different rooms. Each speaker can still be switched between single mode for individual use or group mode for multiroom music with one tap.

One tap to set up izzylink™

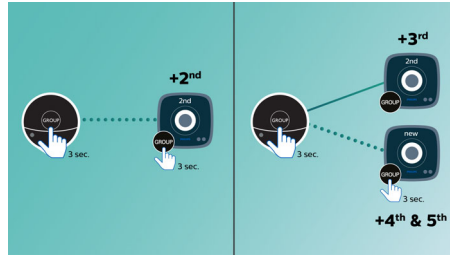

No router, no password, no apps needed for set up. Just long press the "GROUP" button on two speakers to set up for the first time. Repeat to add a 3rd, 4th, or 5th speaker. Each long press of the "Group" button adds one new speaker at a time. Multiroom music has never been easier. Once complete, the izzylink™ network will be stored even when the speaker is unplugged.


Play music in one room

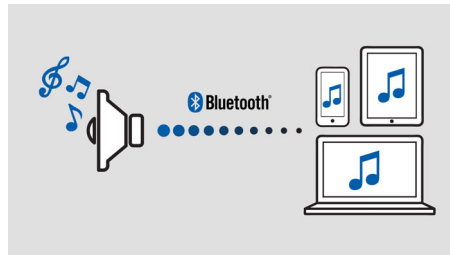

Philips izzy speaker lets you stream all your favorite music from your phone, tablet or

computer, no matter which music or radio app you use.

Switch the lead speaker easily

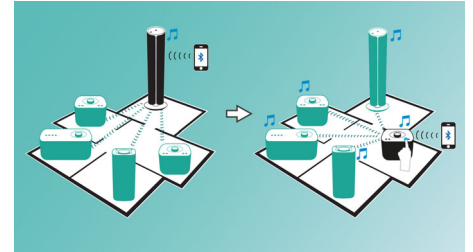

In each izzylink™ group, any individual speaker can be the master, streaming music to the others. When you want to take the lead to share your own music, press the Bluetooth button on the speaker in your room and share that music from your device instantly. Other speakers in the same izzylink™ group will play the same music in sync at the same time. Sharing music with each other is just that easy.



Specifications

Sound

- Sound enhancement: digital sound control 4 modes, Dynamic Bass Boost, LivingSound
- Volume control: up/down
- Maximum output power (RMS): 200W

Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 5" woofer
- No. of built-in speakers: 4
- Subwoofer types: passive

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Station presets: 20
- RDS: Program Type, Station Name
- Antenna: FM antenna (75 ohm)
- Tuner Enhancements: Auto Store
- Auto digital tuning

Connectivity

- USB: USB host
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Alarms: CD Alarm, USB alarm
- Clock: On main display, sleep timer
- Loader type: slot
- Display type: VFD display

Accessories

- Included accessories: AC Power Cord, FM antenna, World Wide Warranty leaflet, Quick Use

Guide

- Remote control
- AC/DC Adaptor: 220-240V

Dimensions

- Product dimensions (WxDxH): 300 x 300 x 994 mm
- Weight incl. Packaging: 13.2 kg
- Packaging dimensions (WxDxH): 356 x 344 x 1110 mm
- Product weight: 11 kg

Power

- Power supply: 220-240V, 50/60 Hz

Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Compatibility

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, iPad Air, iPad Air 2, iPad mini, iPad mini 2, iPad mini 3, iPad with Retina display, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above



Issue date 2018-02-08

Version: 3.2.7

12 NC: 8670 001 36571
EAN: 48 95185 62213 2

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com