



Philips
Portable DVD Player

23cm/ 9" LCD
USB

PD9010



Movies that travel with you

with USB for video, photo and music

Enjoy your movies anytime, anyplace! The portable PD9010 DVD player featuring 9"/23cm LCD display lets you indulge in the pleasure of enjoying DVD/MPEG4 movies, MP3-CD/CD music and JPEG photos on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 22.9 cm (9") TFT color widescreen LCD display
- Built-in stereo speakers

Extra touches for your convenience

- USB connection for video, photo and music playback
- Full Resume on Power Loss
- Car adaptor included

PHILIPS

Highlights

MP3-CD, CD and CD-RW playback




MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

DVD, DVD+/-RW, (S)VCD, CD

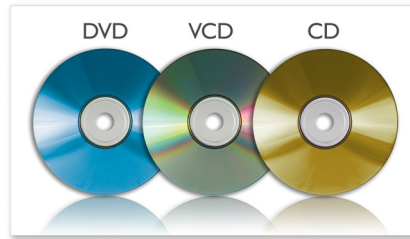

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!


USB connection



Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.

DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.



Specifications

Product dimensions

- Product dimensions (W x H x D):
24 x 3,8 x 17,7 cm
- Weight: 0,954 kg

Picture/Display

- Diagonal screen size: 9 inch / 23 cm
- Resolution: 640(w)x220(H)x3(RGB)
- Display screen type: LCD TFT

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop, Shuffle Play
- Video disc playback system: PAL, NTSC
- Compression formats: MPEG4, XviD, Divx

Still Picture Playback

- Picture Compression Format: JPEG digital camera photos

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1
- USB
- DC in: 9V, 1A

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adaptor: 110-240v, 50/60Hz
- User Manual: Multi Languages
- Car kit: cigarette outlet adaptor, 12vDC

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3hrs*

Packaging dimensions

- EAN: 87 12581 68126 5
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D):
27,2 x 28,5 x 7 cm
- Gross weight: 1,65 kg
- Nett weight: 1,4 kg
- Tare weight: 0,25 kg

Outer Carton

- Gross weight: 5,25 kg
- GTIN: 1 87 12581 68126 2
- Outer carton (L x W x H): 28,2 x 23,3 x 30 cm
- Nett weight: 4,2 kg
- Number of consumer packagings: 3
- Tare weight: 1,05 kg



Issue date 2015-01-15

Version: 2.0.5

12 NC: 8670 001 01196
EAN: 87 12581 68126 5

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.