



Philips
In-Ear Headphones

15mm drivers/open-back
Earbud

SHE2000BL

Bass sound

Unique slim cap design for ergo fit

With 15mm speakers, these earbud headphones are valued for the bass sound. Unique ergonomics design with slim cap ensure comfort fit even for earbud.

Made to fit you and your lifestyle

- Slim cap earbud design for best comfort fit

Music to your ears

- 15mm speaker driver optimizes wearing comfort
- Bass beat vents allow air movement for better sound
- Neodymium magnets enhance bass performance and sensitivity

PHILIPS

Specifications

Sound

- Acoustic system: open
- Frequency response: 10 - 22 000 Hz
- Diaphragm: Mylar dome
- Magnet type: Neodymium
- Type: Dynamic
- Voice coil: copper
- Speaker diameter: 14.8 mm
- Sensitivity: 110 dB
- Maximum power input: 25 mW
- Impedance: 16 ohm

Connectivity

- Type of cable: copper
- Cable Connection: two-parallel, symmetric
- Finishing of connector: nickel plated
- Cable length: 1 m
- Connector: 3.5 mm

Design

- Color: Blue

Highlights

15 mm speaker driver




Small enough for optimum wearing comfort and big enough to deliver crisp, non-distorted sound, the 15 mm speaker driver is an ideal size for listening enjoyment.

Neodymium magnets

Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, better bass response and higher overall sound quality.

Slim cap earbud design

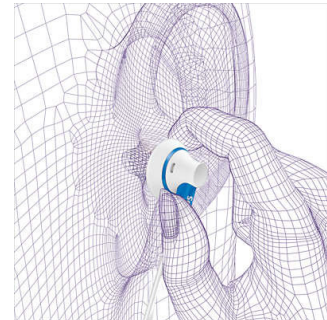

Slim cap is ergonomically designed according to the anatomy of the human ear canal. It fits in the ear securely and comfortably for earbud lovers.

Bass Beat vents

Bass beat vents allow air movement for better sound with a deep rich bass.

