# Quick Start Guide



Step A Connect

Step B Setup

Step C Enjoy

## What's in the Box?

You should find these items upon opening the box.







Studs (x2) used to attach speakers to main unit



















#### Tips

- See the User Manual for how to mount the main unit and speakers onto wall.
- See "Connect AV devices" for more AV connection options.
- For connection and operation of your AV devices, see the respective user manuals.

#### Note:

 If automatic setup of wireless connection fails, see "Set up wireless connection manually" in the User Manual for the solution Attach the speakers to the main unit.

2

Slide the table stand onto the bottom of the main unit.



Place the main unit and speakers.

4

Connect the audio sockets of the system and TV with the supplied coaxial cable (A) or the white/red connectors of the supplied AV cable (B).





Connect the FM antenna.





Connect the power cords of the main unit and wireless subwoofer.

→ Wireless connection sets up automatically.

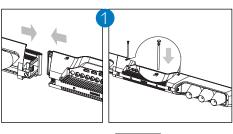





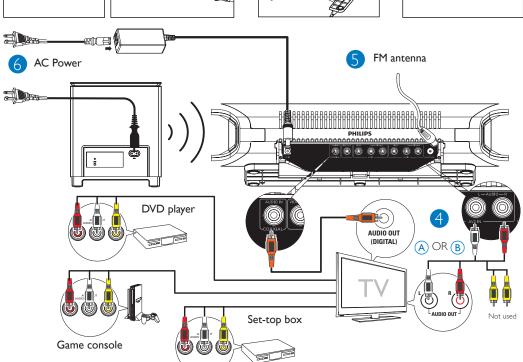

## Step B Setup

## Setting the clock

#### IMPORTANT!

- To set clock in the Eco Power Standby mode, first press and hold 1 for more than 2 seconds to switch to the standby mode.

0

In standby mode, press and hold SET TIME/PRO.

2

When the hour digits flash, press VOL +/- to set the hours.

3

Press SET TIME/PRO.



When the minute digits flash, press VOL +/- to set the minutes.

5

Press SET TIME/PRO again to confirm the time setting.

## Program remote control

1

Place the smart remote control (A) within 1mm-10mm distance from the other remote control (B).



Press **LEARN** for 2 seconds to activate the learning mode.

→ A blue indicator on the smart remote control (A) lights up.



Press the button on the other remote control (B) that is to be stored on the smart remote control (A).

→ If the code is received successfully, the blue indicator flashes.



Press one of the 12 white learning buttons on the smart remote control (A) to store the code of this button.

→ If the code is stored successfully, the indicator flashes green for 2 seconds, then turns blue again.



Repeat steps 3 and 4 to program more buttons on the smart remote control (A).



Press **LEARN** to exit the learning mode.



#### Notes:

- If there is no operation within 8 seconds, the systme quits the learning mode automatically and the indicator turns off.
- During the learning process, the normal remote control functions are disabled.
- By default, the remote control codes of a Philips TV are stored in the smart remote control.
   The available preset buttons are POWER, AV, ▲CH▼, ▲VOL▼, MUTE and SLEEP.



## Enjoy sound of a connected AV device through the soundbar system

Select an AV source.

2

Select the feature and settings you want.

## Programming and tuning to radio stations

Press TUNER to select tuner (FM) source.

2

Press and hold **SETTIME/ PROG** for more than two seconds to program all available stations in order of waveband.

3

Press PRESET/ALB/▲▼ until the desired preset station is displayed.

## Playing a USB mass storage device

Flip open the cover on the front panel.

2

Insert the USB plug of a USB device into the • socket.

3

Press USB to select the USB source.

→ The total number of tracks is displayed.

4

Press PRESET/ALB/▲▼ to select a folder.

5

Press <a> / ▶ </a> to select a file.

6

Press II to start play.



IIP
Detailed playback features and additional functions are described in the accompany owner's manual.