




Philips
Car component speaker

16.5 cm (6.5")

2-way 300W Peak

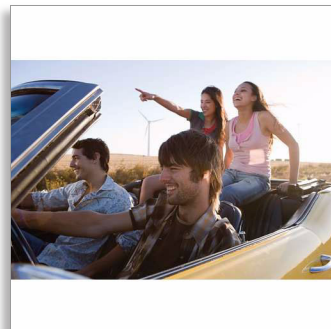

CSP652

Your mobile music theater

with superb sound performance

Play your music loud without distortion with the 16.5cm Philips Car component speaker system CSP652. With peak music power at 300W and an external crossover network to restore high fidelity details, music is presented with clean sound.

Hear every sound detail

- External crossover network precisely restores original sound
- Fiber-composite cone delivers sound with lowest distortion
- Soft silk dome tweeter to restore high fidelity details
- Swivel tweeter to optimize high-frequency response

Extra music power on the road

- 60W RMS power handling
- Butyl rubber surround for maximum smooth response
- Strong ferrite magnet for high power performance

High durability, sustainable performance

- Sturdy fiber-composite cone for all-weather performance
- Stylish speaker grille protects against damages
- Endurance and performance stability in extreme conditions

PHILIPS
sense and simplicity

Specifications

Sound

- Output power (RMS): 60W
- Peak Music Power: 300W
- Sensitivity: 91dB
- Frequency response: 34-35k Hz
- Impedance: 4 Ohms

Loudspeakers

- Speaker type: Component speaker
- Number of ways: 2-way
- Speaker size: 16.5cm (6.5")
- Number of Loudspeakers: 4

Woofers

- Diaphragm: Cone
- Diaphragm material: Fiber-composite
- Surround: Rubber
- Voice coil: Single
- Voice coil material: Copper
- Magnet: Ferrite
- Magnet mass: 18.8 Oz
- Damper: Conex

Tweeter

- Size: 36mm (1-2/5")
- Diaphragm: Dome
- Diaphragm material: Silk
- Magnet: Neodymium
- Mounting options: Angle mounting, Flush mounting, Surface mounting, Swivel mounting

Accessories

- Crossover network: Passive
- Speaker grille: With metal net
- Quick start guide: English, Russian, Spanish, Portuguese, Simplified Chinese
- Angle adapter: 2
- Fix frame: 2
- Mounting bracket: 2
- Cables: Speaker wires

Dimensions

- Product dimensions (W x H x D):
172 x 84 x 172 mm
- Mounting depth: 62.8 mm



Issue date 2013-02-01

Version: 1.0.7

12 NC: 8670 000 70857
EAN: 69 23410 70643 7

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com