




Philips
Micro Music System

Bluetooth®

CD, MP3-CD, USB, DAB+, FM
USB port for charging
60W, Audio-in

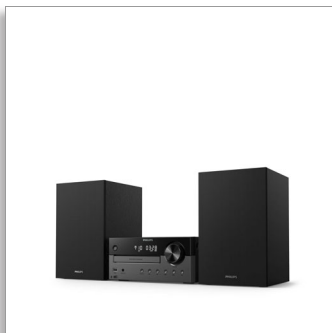

TAM4505

Sleek looks. Rich sounds.

Enrich your home listening with this classic-looking micro system. Enjoy crystal-clear digital DAB+/FM radio, stream music and podcasts, and play CDs--all in rich 60 W sound. You can connect other sources via USB or audio-in.

From CD classics to streaming

- USB port. Connect a legacy source or charge a mobile
- All your music
- CD player. DAB+/FM radio with 20 presets. Audio-in
- Bluetooth. Stream music, podcasts, and more
- Classic design

Great sound for your music

- Digital Sound Control. Choose a preset sound style
- 4" woofer, 20 mm tweeter, 60 W output power
- Bass-reflex loudspeakers. Richer low tones

Fill the room with tunes

- AC-powered. Remote control
- At home in your home
- Main unit dimensions: 220x104x231.5 mm
- Speaker dimensions: 150x241.3x173 mm

PHILIPS

Highlights

All your music

This stylish micro system lets you stream playlists, play CDs, and listen to DAB+ and FM radio. The digital radio tuner with 20 presets delivers crystal-clear reception, and the CD player can read MP3 CDs and recorded CDs.

Bass-reflex loudspeakers

These bookshelf-style loudspeakers give you clear sound and good bass thanks to the combination of woofer, tweeter, and bass-reflex ports. A 60 W maximum output brings

big sound to any room. Perfect for a lounge or open-plan living space.

Classic design

The two-tone central unit and speaker cabinets recall the design of hi-fi separates. The textured volume-control dial adds a satisfying analog feel to operation. There are buttons on the front of the unit for playback and source selection.

Digital Sound Control

Hip-hop or choral, symphony or rock opera? Whatever you love, this micro system's Digital Sound Control function lets you enjoy it more. Pick from preset sound styles designed to bring out the best in your music.

At home in your home

This AC-powered micro system looks great in any room. Bluetooth wireless range is 10 m, and you can charge a smart device via the USB port. An easy-to-use remote puts key functions at your fingertips.



Specifications

Sound

- Sound enhancement: digital sound control, bass reflex speaker system
- Volume control: rotary
- Frequency response: 50-20000 Hz
- Sound mode: Powerful, Clear, Bright, Warm, Balanced
- Maximum output power (RMS): 60W
- Speaker impedance: 6+8 ohm

Loudspeakers

- Driver configuration: 2-way
- Number of sound channels: 2.0
- Number of tweeters: 2
- Number of woofers: 2
- Tweeter diameter: 20mm
- Woofer diameter: 4"

Connectivity

- USB: USB host
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support
- Bluetooth range: 10M (free space)
- Audio in: 3.5mm
- USB charging: 5V, 2A
- DLNA Standard: n.a.
- Smart Home: n.a.

Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, MP3-CD, USB flash drive, CD-R/RW
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop
- Audio supported formats: MP3
- Max sample rate: 24-bit/44.1kHz

Tuner/Reception/Transmission

- Antenna: Detachable pigtail (75 ohm)
- Tuner bands: FM stereo, FM mono, DAB/DAB+
- Station presets: 10 (FM) + 10 (DAB)
- RDS: Yes.
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)
- Tuner type: Digital

Convenience

- Clock: On main display, 24/12 hour display
- Remote Control
- Loader type: tray
- Display type: LED display
- Sleep timer
- No. of alarms: 1
- Alarms: Yes, Buzzer, DAB, FM, CD

Compatibility

- Smartphone/tablet APP control: No

Power

- Power supply: 100-240VAC, 50/60Hz

Packaging dimensions

- Height: 35.2 cm
- Packaging type: Box
- Type of shelf placement: Standing
- Width: 37.6 cm
- Depth: 36.5 cm
- Number of products included: 1
- EAN: 48 95229 10983 4
- Gross weight: 7 kg
- Nett weight: 5.28 kg
- Tare weight: 1.72 kg

Accessories

- Included accessories: AC power cord, FM antenna, Remote Control, 2 x AAA Batteries, Quick start guide, Warranty Leaflet
- Power cord: Length 1.5 m

Design

- Wall mountable: No
- System components: Main control unit, Speakers

Dimensions

- Main Unit (W x H x D): 220x104x231.5 mm
- Main Unit Weight: 1.68 kg
- No. of speaker unit: 2
- Set (W x H x D): 520x241.3x231.5 mm
- Set Weight: 5.23 kg
- Speaker Unit (W x H x D): 150x241.3x173 mm
- Speaker Weight (per Unit): 1.78 kg



Issue date 2024-05-13

Version: 5.0.3

EAN: 48 95229 10983 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com