



Philips
Portable Radio

Digital Audio Broadcasting

AE9011

90elf — your football radio station

Enjoy all games from the 1. and 2. Bundesliga, DFB-Pokal games, as well as select international matches free of charge!

Enjoy digital quality DAB radio

- Digital Radio for a clear and crackle-free radio experience
- 20 preset tuning stations

Easy to use

- Quick scan of DAB stations for extra convenience
- Large backlit LCD display for easy viewing in low light
- Mains or battery operated for flexible placement

PHILIPS
sense and simplicity

Specifications

Tuner/Reception/Transmission

- DAB: Band III, EQ settings, Info display, Menu, smart scan
- Tuner bands: FM, DAB (Band III)
- Station presets: 20
- Antenna: FM antenna
- Tuner enhancement: auto digital tuning

Sound

- Volume control: up/down
- Output power: 300 mW RMS

Loudspeakers

- No. of built-in speakers: 1

Connectivity

- Audio/Video output: Headphone (3.5 mm)

Convenience

- Display type: LCD display
- Backlight colour: white

Power

- Battery voltage: 1.5 V
- Number of batteries: 6
- Battery type: AA size (LR6)
- Power type: AC Input

Accessories

- Cables/Connection: AC-DC adapter
- Others: Quick start guide, User Manual
- Guaranteed: Warranty Certificate

Dimensions

- Main unit depth: 45 mm
- Main unit height: 104 mm
- Main unit width: 200 mm
- Packaging depth: 90 mm
- Packaging height: 133 mm
- Packaging width: 317 mm
- Gross weight: 0.884 kg
- Weight: 0.65 kg

DIGITALRADIO

Highlights

Digital Radio



Digital Radio is, on top of FM analogue transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear, crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With digital stations there are no frequencies to remember and sets are tuned by station name, so there is no returning on the move.

Quick scan of DAB stations




DAB (Digital Audio Broadcasting) digital radio is a new way of broadcasting radio, in addition to FM analogue transmission, via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

Large backlit LCD display

Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

Mains or battery operated

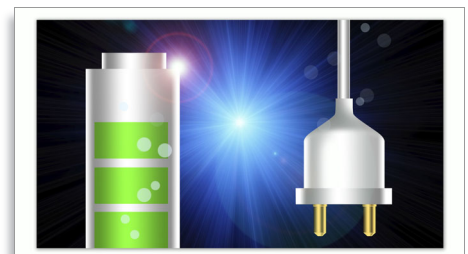

Power your set with batteries or a direct mains supply, and enjoy great convenience and flexibility. When a power socket is not available or when you don't want unsightly wires trailing, simply operate the set with batteries. When you need a continuous and stable power supply, connect the set directly to a wall socket. Now you can truly enjoy the freedom of listening wherever you like.



Issue date 2011-10-12

Version: 2.1.5

12 NC: 8670 000 82202
EAN: 87 12581 62102 5

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com