


Philips
5.1 Home theater with 3D
Angled speakers

3D Blu-ray
iPod/iPhone ready

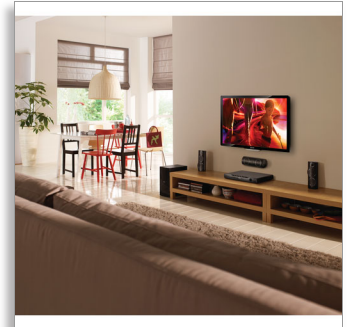

HTS5561

Enjoy powerful home cinema with 3D Angled Speakers

Obsessed with Sound

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favorite entertainment content including 3D Blu-ray on this innovative Philips home cinema system HTS5561.

Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000W RMS power delivers great sound for movies and music
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services & access multimedia on TV




PHILIPS

5.1 Home theater
3D Blu-ray iPod/iPhone ready


Highlights

3D Angled speakers

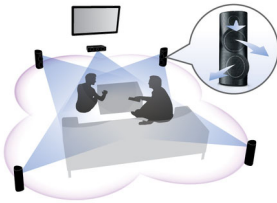

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

Wireless rear speakers option

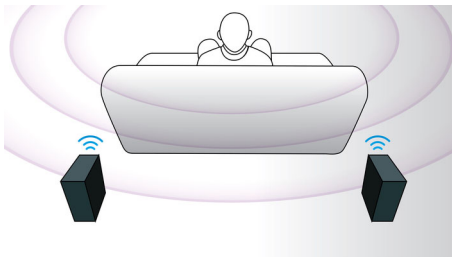

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-


ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Smart TV



Philips home theater systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and to start browsing for services like, video-on-demand stores* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your couch. Can't find the remote control? Simply use your smart phone or tablet PC to control your home theater via the Philips MyRemote app.

Dolby TrueHD and DTS-HD

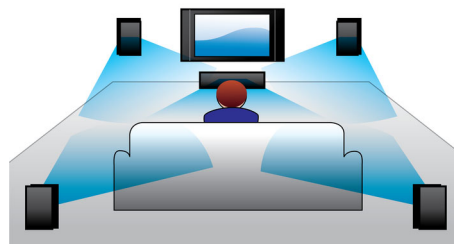

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

HTS5561/12

1000W RMS power



1000W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

Perfect match to Philips 5000 series TV*



Perfect match to Philips 5000 series TV
Relax and enjoy a great TV night in brilliant LED

quality on a matching Philips 5000 Series 2011 LED TV. Powered by the Pixel Plus HD engine for clear, vivid Full HD pictures, and complimented by authentic sound. Both TV and home theater can be operated with only one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition they are both designed with same materials and finishing for a perfect visual match!



Specifications

Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, RWSS5510 Wireless Rear Audio, STS1300 Floor stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Matching Philips Televisions*

- 5000 Series: 32PFL5406, 32PFL5606, 40PFL5606

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Smart TV: DLNA, MyRemote, Net TV
- Front / Side connections: Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Main Unit Weight: 3.7 kg
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg

- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 104 mm
- Front Speaker Weight: 1.03 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 100 x 280 x 115 mm
- Rear Speaker Weight: 1.03 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 4.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 494 x 600 mm
- Weight incl. Packaging: 18.5 kg

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 2 x 3" full range woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 3 ohm
- Drivers per Satellite speaker: 2 x 3" full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 105 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Center speaker output power: 230 W
- Satellite speaker output power: 135 W x 4
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 1000 W

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2019-02-12

Version: 6.3.8

12 NC: 8670 000 67655
EAN: 87 12581 56273 1

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The home theater can also be matched with all other Philips TVs.
* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.