


Philips ActionFit  
Sports headphones

8.6mm drivers/closed-back  
In-ear

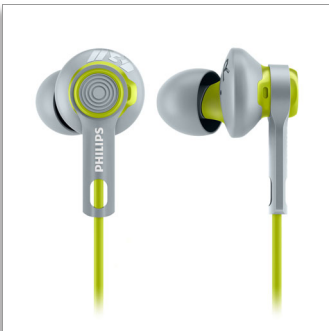

SHQ2300LF

## Experience freedom. Stop at nothing

### Secure fit and lightweight

Keep your Actionfit SHQ2300 headphones tightly in your ears no matter what you do with a unique stability ring. Just focus only on your workout, not on headphones falling out.

#### protection

- Sporty carrying pouch for easy storage
- Kevlar® Reinforced cable for ultimate durability
- Sweat and moisture proof - ideal for any workout

#### Freedom

- 3 ear tip sizes for the optimum fit
- Cable clip included for tangle-free workout
- 4.3g ultra lightweight design provides ultimate comfort\*
- Stability ring increase secure fit in the ear

#### Push harder

- High performance sound drives peak performance
- Insert earphones provide sound isolation

**PHILIPS**

Sports headphones  
8.6mm drivers/closed-back In-ear

SHQ2300LF/00

# Highlights

## 3 choices of ear tips sizes




3 ear tip sizes for the optimum fit

## 4.3g ultra lightweight design\*



Weighing in at just 4.3g, these Actionfit sports earphones are so light and comfortable that you will forget you are even wearing them. Perfect for keeping you going right through the hard final miles.


## Cable clip

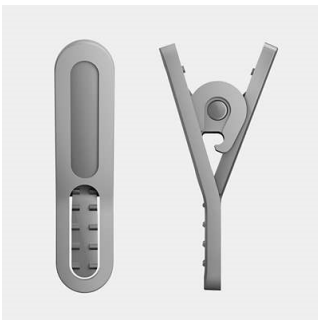

A cable clip comes included with ActionFit earphones, keeping the cable out of your way while you push yourself harder.

## Sporty carrying pouch for easy storage

## High performance sound

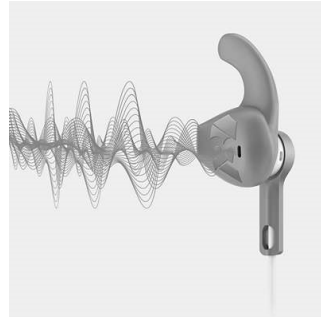


8.6mm neodymium drivers pump out high performance sound, pushing you to perform at your best.

## Kevlar® Reinforced cable



Kevlar® reinforced headphone cables are tough enough to survive even the roughest of workouts.

## Stability ring

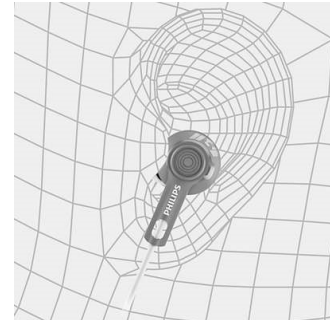

A rubberized stability ring on the body of the earphones lock them in place when you put them in your ears so you need never worry about them dropping out.

## Sound isolation

Insert earphones create a tight seal in the ear canal, resulting in a strong isolation effect. Our oval acoustics tubes are ergonomically optimized to ensure exceptional fit.

## Sweat and moisture proof



Sweat or rain will no longer stop you from maxing yourself out to your favorite tunes. These Actionfit sports headphones materials are sweat and water proof making them the perfect workout companion whatever the weather.

# Specifications

## Sound

- Acoustic system: Closed
- Frequency response: 7 - 24 000 Hz
- Diaphragm: PET
- Magnet type: Neodymium
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB
- Maximum power input: 20 mW
- Impedance: 16 ohm

## Connectivity

- Cable Connection: two-parallel, symmetric
- Finishing of connector: gold-plated
- Cable length: 1.2 m
- Connector: 3.5 mm

## Outer Carton

- Length: 38 cm
- Number of consumer packagings: 24
- Width: 18.1 cm
- Gross weight: 1.791 kg
- Height: 24.8 cm
- GTIN: 1 69 25970 70027 3
- Nett weight: 0.444 kg
- Tare weight: 1.347 kg

## Inner Carton

- Length: 18 cm
- Number of consumer packagings: 3
- Width: 8.2 cm

- Height: 10.5 cm
- Nett weight: 0.0555 kg
- Gross weight: 0.1885 kg
- Tare weight: 0.133 kg
- GTIN: 2 69 25970 70027 0

## Packaging dimensions

- Height: 17.5 cm
- Packaging type: Blister
- Type of shelf placement: Both
- Width: 9.5 cm
- Depth: 2.5 cm
- Number of products included: 1
- EAN: 69 25970 70027 6
- Gross weight: 0.0525 kg
- Nett weight: 0.0185 kg
- Tare weight: 0.034 kg

## Product dimensions

- Height: 8 cm
- Width: 3 cm
- Depth: 2.8 cm
- Weight: 0.0185 kg

## Accessories

- Storage pouch
- Cable management: Cable clip

## Design

- Color: Lime Yellow & White



Issue date 2024-03-25

Version: 3.2.3

EAN: 69 25970 70027 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)