


Philips
Portable DVD Player with
Zero Bright Dot™ screen

25.9 cm (10.2") widescreen LCD

PET1035

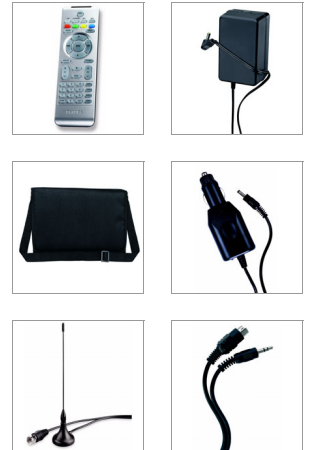

Swivel Screen, flexible view

with built-in digital TV receiver

Enjoy movies on the Philips PET1030 Portable DVD Player with 10.2" LCD display and a 180-degree swivel screen. Plus, share your favorite video experiences with pals thanks to memory card slot and USB2.0 connector. Comes with Travel bag.

Immerse in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD

Experience the digital interactive TV phenomenon

- Support DVB-T for free-to-air digital TV and radio channels
- 7-day Electronic Program Guide (EPG)
- Direct Teletext and subtitle function support

Perfect viewing anywhere

- Zero Bright Dot™ screen for optimal screen quality
- High-resolution 10.2" TFT LCD display for great viewing

For ultimate convenience

- Up to 4-hour playback with rechargeable battery*
- USB and SD card slots for photos and music playback
- Travel bag included

PHILIPS

Highlights

Play DVD, DivX and MPEG4

With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theater Systems.

Support DVB-T

Expand your entertainment experience and enjoy digital channel programs - for free. With DVB-T (Digital Video Broadcasting - Terrestrial), you can receive free digital TV and radio programs in Europe. The signal is kept digital without any analog steps in between, to preserve the highest quality.

Zero Bright Dot™ screen

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD

displays commonly have imperfections, termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.



Specifications

Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polarizer
- Diagonal screen size (inch): 10.2 inch
- Resolution: 800(W)×480(H)×3(RGB)
- Brightness: 200 cd/m²
- Contrast ratio (typical): 250:1
- Effective viewing area: 222.0×133.2mm
- Pixel pitch: 0.1905(W)×0.1905(H) mm
- Response time (typical): 30 ms

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, WMA, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Slow Backward, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- MP3 bit rates: 32 - 320 kbps
- WMA bit rates: 32 - 192 kbps
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V
- AV output: Composite (CVBS) x1

- Headphone jack: 3.5mm Stereo Headphone
- AV input: Composite (CVBS) x1
- Audio Output - Digital: Coaxial (cinch)
- Other connections: S-Video out, Component Video out Interlaced

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- Digital TV: DVB Terrestrial *

Video Decoding

- Aspect Ratio: 16:9, 4:3, 4:3 Letterbox
- Reception-Demodulation: COFDM 2K/8K, MPEG-2 DVB compliant, Network: MFN/SFN, QPSK

Accessories

- AC/DC Adaptor: DC-in 9V; 110-240v, 50/60Hz
- Cables: A/V cable x1, S-video cable x1, Component video cable x1
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5506 slim remote
- User Manual: 16 languages
- Included accessories: Aerial antenna, Travel pouch

Dimensions

- Product dimensions (W x H x D): 270 x 32 x 188 mm
- Product weight: 1.5 kg
- Packaging dimensions (W x H x D): 336 x 282 x 145 mm
- Master carton dimensions: 297 x 361 x 450 mm
- Master carton quantity: 3
- Master carton weight: 9.7 kg
- Packaging type: D-box



Issue date 2014-02-06

Version: 2.0.3

12 NC: 8670 000 31333
EAN: 87 12581 34438 2

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com