



Philips Fidelio  
Wireless speaker

Philips Wireless Home System

120 W max  
Works with Ambilight TVs  
Sustainable Muirhead leather



TAFS1

## Crafted for all-round sound

Bring every song and film to life in rich, room-filling sound. You can connect this sleek wireless Fidelio FS1 speaker to others for a seamless multi-room experience. Or connect to a Philips TV or soundbar for immersive home cinema.

### Beautiful Fidelio design

- Built-in LEDs. Ambilight on board
- Head-turning looks

### Give your entertainment the sound it deserves

- 120 W max. Two passive radiators for rich bass
- 3.5" woofer. 1" tweeter. 2.5" midrange/Atmos driver
- Intelligent pairing. Immerse more. Hear more
- Pair for stereo
- Philips Fidelio FS1. Natural sound for music and movies

### A seamless experience

- Connects to your favourite AI voice assistant-enabled device
- However you stream your music—perfect Fidelio sound
- Philips Sound app—regular updates for the best experience
- Philips Wireless Home System powered by DTS Play-Fi
- Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast

**PHILIPS**

## Wireless speaker

Philips Wireless Home System 120 W max, Works with Ambilight TVs, Sustainable Muirhead leather

# Highlights

### Natural Fidelio sound




The Fidelio FS1 speaker brings music and movies to life with sparkling highs, warm midrange frequencies and rich bass. A down-firing woofer and twin passive radiators add real depth to every beat—and every score. It's perfect for small- to medium-sized rooms.

### Head-turning looks



This sleek wireless FS1 speaker looks great on its own, and even better in a Fidelio home-cinema setup. The FS1 is wrapped in an acoustically transparent metal grille, and its bevel is trimmed in anthracite muirhead leather. It matches the Fidelio FB1 soundbar and FW1 subwoofer beautifully.

### Philips Wireless Home System

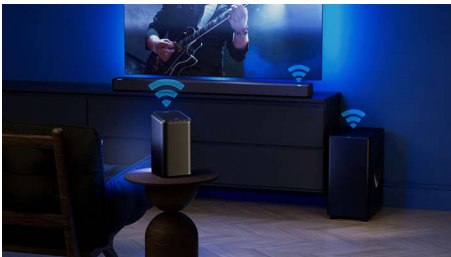

You can sync multiple FS1 speakers to enjoy superb multi-room sound. Pair with a compatible Philips TV\* for more cinematic sound and better vocals, or connect two speakers to a Fidelio FB1 soundbar to create a

true 7.1.4 surround-sound set-up. Add a Fidelio FW1 subwoofer to deepen the bass.

### Pair for stereo



Just one of these wireless speakers fills a small-to-medium room with rich, detailed sound. Pair a second Fidelio FS1 speaker in the same room, and you'll get incredibly immersive stereo. Jazz, rock, EDM or the latest episodes in your pod feed—enjoy even clearer sound with a real sense of space.

### Intelligent pairing



Good things happen when this Fidelio speaker pairs with a Philips soundbar or subwoofer, another FS1 speaker or a Philips TV\*. The speaker recognises what it's paired with and automatically adjusts its performance, freeing paired components to add more richness and detail to the mix.

TAFS1/10

### Fidelio sound for streaming



Whether you're streaming directly from Spotify, or accessing hi-res albums on Tidal, this speaker brings it all to life. If you're streaming higher-than-CD-quality files, Critical Listening mode lets you allocate bandwidth to a single FS1 speaker so that no detail is lost.

### Ambilight on board

This speaker doesn't just do music—it does Ambilight too. For films, you can set the speaker to sync with the Ambilight on your Philips TV. Lounge Mode turns the FS1 into a colourful static light, perfect for dinner parties or a good book. Follow Music creates a lightshow that pulses to the beat.

### Connects with voice assistants

With Wi-Fi, Bluetooth, Chromecast and Apple AirPlay 2 compatibility—all your devices are covered. Stream how you like. Control the speaker using Alexa, the Google Assistant or Siri. Turn the music up. Skip tracks. All completely hands-free.

### Philips Sound app

Philips Sound app—regular updates for the best experience

### Wi-Fi. Bluetooth. AirPlay 2

Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast

### 120 W max. 2 passive radiators

120 W max. Two passive radiators for rich bass

### 3.5" woofer. 1" tweeter

3.5" woofer. 1" tweeter. 2.5" midrange/Atmos driver



## Wireless speaker

Philips Wireless Home System 120 W max, Works with Ambilight TVs, Sustainable Muirhead leather

TAFS1/10

# Specifications

## Sound

- Frequency response: 50-20K Hz
- Output power (RMS): 60 W
- Output power (MAX): 120 W
- Total harmonic distortion: 1%

## Loudspeakers

- Driver configuration: 3-way
- Middle range driver diameter: 2.5" (up-firing)
- Number of middle range drivers: 1
- Number of sound channels: 1.0.1
- Number of tweeters: 1
- Number of woofers: 1
- Passive radiators: 2
- Tweeter diameter: 1"
- Woofer diameter: 3.5" (down-firing)

## Connectivity

- Bluetooth
- Bluetooth version: 5.0
- Bluetooth profiles: A2DP, AVRCP, Streaming format: SBC, AAC
- Bluetooth range: Line of sight, 20 m or 66 ft
- Audio in: 1 x 3.5 mm
- Network setup: Philips Sound app, powered by DTS Play-Fi
- Wi-Fi: 2.4 GHz/5 GHz, IEEE 802.11 a/b/g/n/ac
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo, Surround, Grouping
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Built-in Chromecast, Spotify Connect, Works with Apple AirPlay 2, Works with

OK Google, Works with Alexa

## Convenience

- Built-in microphone: 0
- Light Effect: Yes, works with Ambilight TV
- Hands-free calling: No

## Compatibility

- Smartphone/tablet APP control

## Power

- Power supply: 100 - 240 V AC, 50/60 Hz
- Power bank: No

## Packaging dimensions

- Height: 35.5 cm
- Packaging type: Carton
- Type of shelf placement: Standing
- Width: 18.6 cm
- Depth: 18.4 cm
- Number of products included: 1
- EAN: 48 95229 12669 5
- Gross weight: 3.397 kg
- Net weight: 2.896 kg
- Tare weight: 0.501 kg

## Product dimensions

- Height: 25.3 cm
- Width: 14.2 cm
- Depth: 14.2 cm
- Weight: 2.328 kg

## Accessories

- Included accessories: AC power adapter, Quick start guide, World Wide Warranty leaflet



Issue date 2024-04-01

Version: 5.1.2

EAN: 48 95229 12669 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* This feature works with DTS Play-Fi-compatible Philips TVs from 2021 or later.