



Philips  
Clock Radio

### Universal charging

FM, Digital tuning  
Dual alarm  
Time & alarm backup

AJ3250S

## Wake up to FM radio and a smartphone fully charged

Philips AJ3250S clock radio charges any smartphone, iPhone or Android, while you sleep. Flexi-cradle fits the socket position on any phone perfectly. Wake up to your favourite FM radio and start your day fully charged.

### Convenient bedside battery charger

- Universal charging cradles and clutter-free cable management

### Start the day your way

- Wake up to your favorite radio tune or a buzzer
- Repeat alarm for additional snooze
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- FM digital tuning with presets

### Easy to use

- Sleep timer for easy falling asleep to your favorite music
- Battery back-up ensures memory of time during power failure


# PHILIPS

## Clock Radio

Universal charging FM, Digital tuning, Dual alarm, Time & alarm backup


# Highlights

### Universal charging

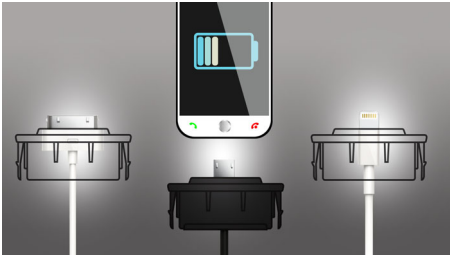


No more cable chaos on your nightstand. This clock radio comes with three interchangeable cradles and for charging your iPhone, Android or other smartphones. Use Apple Lightning or 30-pin charging cable with the right cradle for your iPhone and/or the by-packed micro USB cradle for Android and others. Once the cable and cradle are hooked up, dock your smartphone and start charging right away. Even the wires are tucked away neatly out of sight.

### Wake up to radio or a buzzer

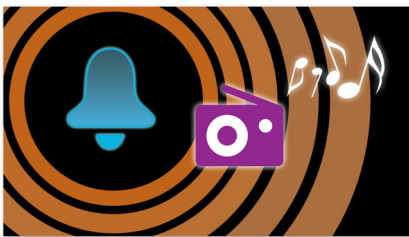


Wake up to sounds from your favorite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

### Repeat alarm

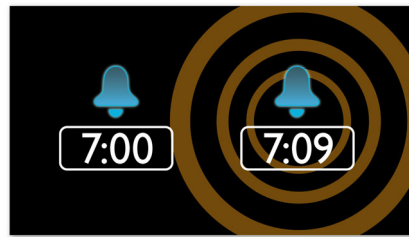

To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.

### Dual alarm

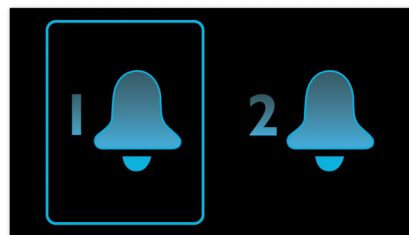

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

### Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle

AJ3250S/12

wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

### FM digital tuning with presets



Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

### Battery back-up

Battery back-up ensures memory of time during power failure

### Sleep Timer



Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.

DIGITAL  
TUNER

dual alarm

gentle wake

SLEEPTIMER

# Specifications

## Clock

- Type: Digital
- Display: LED
- Time format: 24H

## Alarm

- No. of alarms: 2
- Alarm source: Buzzer, FM radio
- Snooze (repeat alarm): Yes, 9mins
- 24 hours alarm reset
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Tuner/Reception/Transmission

- Tuner bands: FM
- FM frequency range: 87.5 - 108 MHz
- No. of preset stations: 10 FM
- Antenna: FM antenna

## Sound

- Sound system: mono
- Output power (RMS): 500 mW
- Volume Control: digital

## Power

- Power type: AC Input
- AC power input: 100-240V, 50/60 Hz
- Standby power consumption: < 1W
- Battery type: AA
- Number of batteries: 2

## Dimensions

- Packaging type: D-box
- Product dimensions (WxDxH): 112 x 101 x 125 mm
- Packaging dimensions (WxDxH): 119 x 122 x 183 mm
- Product weight: 0.41 kg
- Weight incl. Packaging: 0.56 kg

## Accessories

- micro USB cable with cradle
- Cradle for: Lightning (iPhone 5) connector, 30-pin (iPhone 4/4S) connector
- Quick start guide
- Warranty: Warranty leaflet



Issue date 2015-09-09

Version: 1.0.4

12 NC: 8670 001 25484  
EAN: 48 95185 60895 2

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)