



Philips  
Mini Hi-Fi System

2000W  
Bluetooth

FWT9200SBX

# Powerful wireless music

## Obsessed with sound

Listen to all your digital music via Bluetooth. Sass up music enjoyment on the FWT9200 with 2000W RMS/ 23800W PMPO, dual subwoofer for deep bass, multi-colored disco lights and UniSound for clear natural sound.

### Powerful sound you can hear and feel

- 2000W RMS total output power / 23800W PMPO
- Dual subwoofers for superb deep bass
- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- UniSound for natural and crystal-clear sound

### Multiple source MP3 music

- Stream music wirelessly via Bluetooth™ from your smartphone
- Dual USB Direct for MP3 playback and transfer
- Rip music from CDs, radio and karaoke onto USB device
- Compatible with MP3-CD
- MP3 Link for portable music playback

### Convenient and easy to use

- Connection for TV or DVD player
- Multiple color Lighting effect for your party mood enjoyment

# PHILIPS

# Highlights

## Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.


## MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a

button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

## UniSound

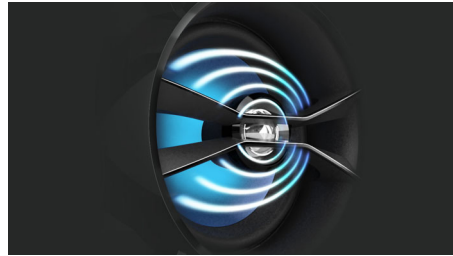


Get ready for music that is undeniably clearer and more natural. The UniSound technology harnesses acoustic design and engineering expertise to deliver sound the way it was meant to be heard. In conventional speakers, the tweeter and woofer deliver sound from different locations. This creates strong interferences that distort sound, resulting in unnatural, flat and stifled audio. UniSound frees music by placing the tweeter and woofer in unique positions and incorporating rigorous crossover engineering, vastly reducing interference and delivering natural sound that is true to the original.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Rip music onto USB device

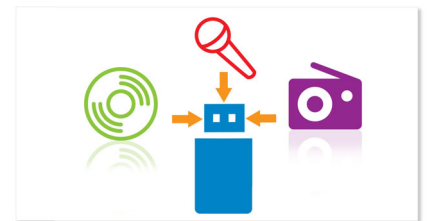

Rip music from CDs, radio and karaoke onto USB device

# Specifications

## Sound

- Output Power: 2000W RMS/ 23800W PMPO
- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, incredible surround, digital sound control 4 modes, virtual ambience control, UniSound

## Loudspeakers

- Number of speaker boxes: 6
- Speaker drivers: 8" woofer, 2" tweeter
- Subwoofer types: 10" woofer, passive
- Speaker types: bass reflex speaker system

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

## Audio recording

- Recording media: USB device
- USB recording sources: CD, tuner, AUX, microphone in, USB
- USB recording modes: instant record, programmed tracks, schedule radio program, single disc, single track

## Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: FM, MW
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

## Connectivity

- MP3 Link: 3.5mm stereo line in
- Microphone: dual microphone sockets
- USB: Dual USB host
- PC in (Aux in): 2xRCA (Audio)
- Bluetooth profiles: A2DP

## Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Number of discs: 1
- Clock: on main display, sleep timer
- Display type: LCD display
- Karaoke: MIC volume

## Accessories

- Remote control: 28-key with 2xAAA batteries
- Cables/Connection: MP3 Link cable
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

## Dimensions

- Main speaker dimensions (W x D): 258 x 388 mm
- Main speaker height: 452 mm
- Main unit width: 265 mm
- Main unit height: 430.5 mm
- Main unit depth: 377 mm
- Subwoofer width: 315 mm
- Subwoofer height: 450 mm
- Subwoofer depth: 456 mm
- Surround speaker width: 198 mm
- Surround speaker height: 375 mm
- Surround speaker depth: 267 mm

## Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-05-01

Version: 1.0.3

12 NC: 8670 001 03085  
EAN: 87 12581 68796 0

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set in a volume higher than 85 decibel  
because this may damage your hearing.