

Philips
DVD player



DVP4000



Experience freedom

Be in total empowerment to enjoy sharp, crystal-clear picture and sound quality movies and music wherever and whenever you desire. It's your home entertainment - at your control.

Fits everywhere, goes anywhere

- Compact design
- Quick and easy set-up for no-fuss installation

Play it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

Superb audio and video performance

- Progressive Scan component video for optimized image quality
- High quality outputs for analog and digital audio

PHILIPS

Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit, 54 MHz
- Picture enhancement: 3/2 - 2/2 motion pull down, Progressive scan

Sound

- D/A converter: 192KHz/24 bit
- Signal to noise ratio: 80 dB
- Distortion and Noise (1kHz): 75 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital, Stereo
- Sound Enhancement: Night Mode

Video Playback

- Playback Media: CD-R/CD-RW, CD, Video CD, DVD-Video, DVD+RW, DVD-RW (Video mode), DVD+R, DVD-R, DVD
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Compression format: MP3, PCM
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Zoom, Slideshow

Connectivity

- Other connections: ComponentVideo out, Progressive, Composite video (CVBS) out, Digital coaxial out, Analog audio Left/Right out

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, Traditional Chinese

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: 12 W
- Standby power consumption: < 2 W

Accessories

- Batteries: 1 x Lithium Coin Cell
- Cables: 1 x AV Cables
- Remote control: 3139 258 70131
- User Manual: English, Simplified Chinese, Traditional Chinese, B. Melayu
- Warranty Card

Dimensions

- Set dimensions (W x H x D): 224 x 47 x 219 mm
- Set weight: 0.9 kg
- Packaging dimensions (W x H x D): 274 x 88 x 295 mm
- Weight incl. Packaging: 1.6 kg

Highlights

Multi format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music


Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

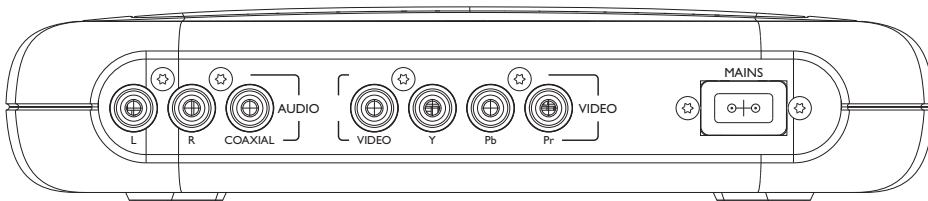

Issue date 2014-02-10

Version: 7.0.9

12 NC: 8622 810 12233
EAN: 87 10895 86139 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com