




Philips
Digital PhotoFrame with
Bluetooth

26.4cm/10.4"

multimedia 4:3 frame ratio

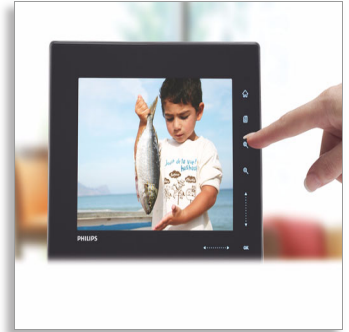

SPF7010

"..and I love you even more than I did then."

PhotoFrame with Bluetooth

Be ready to fall in love over again! This irresistible PhotoFrame is handsomely designed with Touch Control and Bluetooth. The must-have companion to keep all those important moments alive!

Top quality display for amazing viewing experience

- imagen Pro for sharp, vibrant and natural skin colors
- 4:3 aspect ratio for optimal distortion-free display
- Add new glow to old memories with RadiantColor

Simple intuitive operation and great convenience

- Automatic slideshow from USB or memory card
- Touch sensitive controls on the PhotoFrame border
- Transfer photos from your mobile phone via Bluetooth

Environmentally friendly green design

- Power saving via auto dimming by detecting ambient lighting
- Eco-friendly Photoframe



Specifications

Picture/Display

- Viewing angle: @ C/R > 10, 130° (H) / 110° (V)
- Lifetime, to 50% brightness: 20000 hr
- Aspect ratio: 4:3
- Panel resolution: 800 x 600
- Brightness: 250 cd/m²
- Contrast ratio (typical): 500:1

Connectivity

- USB: USB 2.0 Host, USB 2.0 Slave
- Bluetooth: Bluetooth V2.0 + EDR, Class 2, Receiver only

Storage Media

- USB: USB flash drive
- Memory Card Types: Compact Flash type I, Secure Digital (SD), Secure Digital (SDHC), Multimedia Card, xD card, Memory Stick, Memory Stick Pro, Memory Stick Duo, Memory Stick Pro Duo
- Built-in memory capacity: 1GB (for 1000 High Definition photos)

Convenience

- Card Reader: Built-in (2x)
- Photo format supported: Up to 10MB JPEG files, Up to 20 Megapixels, JPEG photo
- Video format supported: MPEG1 & 4, MotionJPEG, .AVI, .MOV
- Background Music supported: MP3
- Buttons and controls: touch border control, Power button
- Playback mode: Full screen browse, Slideshow, Thumbnail browse
- Album management: Create, Delete, Edit, Rename
- Photo edit: Copy, Delete, Rotate
- Slideshow setting: Random, Sequential, Transition effect, Collage (multiple pictures)
- Setup function: Brightness adjustment, Language, Slideshow, Status, Auto on/off, Beep on/off, Set time and date, Photo source, Clock display enable/disable, Event reminder with snooze
- System status: Firmware version, Remaining memory
- Connected media status: Connected media, Remaining memory
- Regulatory approvals: CE, GOST, Switzerland
- Other convenience: Kensington lock compatible
- Placement: Landscape, Portrait, Photo auto orientation
- Screen background: Black, White, Gray, Auto-fit
- Photo effects: Black and White, Sepia
- On-Screen Display languages: English, Spanish, German, French, Italian, Dutch, Danish,

- Portuguese, Russian, Simplified Chinese
- System compatibility: Mac Os X, Windows Vista, Windows XP

Accessories

- Included accessories: AC-DC Adapter, USB cable, Quick start guide, CD-ROM with software + manual
- User Manual: Arabic, Czech, Danish/Norwegian, Dutch, English, Finnish, French, German, Greek, Italian, Malay, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish

Dimensions

- Set dimensions with stand (W x H x D): 222.6 x 182.2 x 33.2 mm
- Weight: 0.34 kg
- Temperature range (operation): 0°C to 40°C
- Temperature range (storage): -10°C to 60°C

Power

- Power supply: 100-240VAC, 50/60Hz
- Power source: DC output 9V, 2A
- Power consumption: (System on) 8.8 W
- Power mode supported: AC powered

Packaging dimensions

- EAN: 87 12581 49590 9
- Number of products included: 1
- Packaging type: Carton
- Packaging dimensions (W x H x D): 31.1 x 26.3 x 9.7 cm
- Gross weight: 1.551 kg
- Nett weight: 1.014 kg
- Tare weight: 0.537 kg
- Packaging dimensions (W x H x D): 12.2 x 10.4 x 3.8 inch
- Gross weight: 3.419 lb
- Nett weight: 2.235 lb
- Tare weight: 1.184 lb

Outer Carton

- GTIN: 1 87 12581 49590 6
- Number of consumer packagings: 2
- Gross weight: 3.78 kg
- Outer carton (L x W x H): 33.2 x 28.2 x 23.1 cm
- Nett weight: 2.028 kg
- Tare weight: 1.752 kg
- Gross weight: 8.333 lb
- Outer carton (L x W x H): 13.1 x 11.1 x 9.1 inch
- Nett weight: 4.471 lb
- Tare weight: 3.862 lb

Highlights

imagen Pro for vibrant colors

The unique Philips imagen enhancement technology automatically analyzes your photos to correct color and adjust for optimal contrast. imagen Pro is a more advanced image enhancement which includes the 3 essential elements from imagen to have more color accuracy, color depth and smart contrast. On top of these, imagen Pro offers enhanced skin color, sharper images and flicker-free photo viewing which is very important for still pictures.

4:3 perfect frame ratio

Philips digital PhotoFrame ensures your photo to be displayed in 4:3 ratio for the best viewing experience.

Automatic slideshow

Automatic slideshows start from any USB drive or memory card for all those moments you don't want to spend time copying photos to your PhotoFrame.

Border Touch Control

The touch sensitive controls of the PhotoFrame are instantly illuminated during operations, making it easy to scroll through your photos, video clips and music. In photo viewing mode, you can slide your finger along the horizontal touch border enabling you to select a new photo easily from the thumbnails shown on screen.

Photo transfer via Bluetooth

We know you like to take photos on your mobile phone. Now you can transfer these photos to your Philips digital PhotoFrame via Bluetooth without any additional dongles or cables.

RadiantColor

RadiantColor is an exclusive Philips technology for displaying smaller photos in the optimal 4:3 ratio by extending the color on the edges of a less-than-full-screen photo to the sides of the screen, eliminating black bars and aspect ratio distortion.

Smart Power Pro

Smart Power Pro is a sensor that turns PhotoFrame on and off by detecting ambient lighting condition reducing energy consumption for the sake of our environment saving up to one third of your PhotoFrame energy costs. The best news is that this is all done automatically!

Eco-friendly Photoframe

Philips PhotoFrame are designed and produced according to our EcoDesign principles aimed at minimizing overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability.



Issue date 2013-01-31

Version: 3.3.2

12 NC: 8670 000 55206
EAN: 87 12581 49590 9

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com