

Philips  
Mini Hi-Fi System

DVD

FWD17



## DVD and MP3-CD Playback

Savor the magic of movies and music on the FWD17 with DVD and MP3-CD playback. Dolby Digital ensure a rich movie experience. Enjoy music powerfully enhanced by Dynamic Bass Boost and 1200W PMPO.

### **Enrich your movie experience**

- Plays DVD, CD and MP3
- Dolby Digital for movies or concerts in full surround sound
- 2x30W RMS/ 1200W PMPO

### **Longer listening, greater enjoyment**

- Stereo cassette deck
- AM/FM tuner
- Dynamic Bass Boost for deep and dramatic sound

### **Be a singing sensation**

- Karaoke for endless karaoke entertainment at home

**PHILIPS**  
sense and simplicity

# Highlights

## Plays DVD/CD/MP3

Plays DVD, CD and MP3

## Dolby Digital Surround


Because Dolby Digital and DTS, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## 2x30W RMS/ 1200W PMPO



2x30W RMS/ 1200W PMPO

## Stereo cassette deck

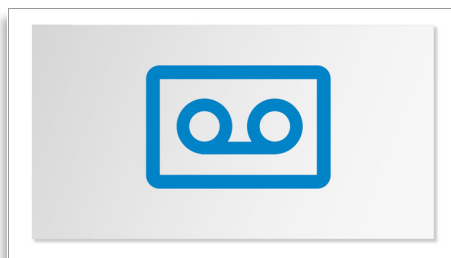

Stereo cassette deck

## AM/FM tuner



AM/FM tuner



Issue date 2009-11-06

Version: 1.0.2

12 NC: 8670 000 33799  
EAN: 87 12581 36287 4

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

# Specifications

## Sound

- Output Power: 2x30W RMS, 1200W PMPO
- Sound Enhancement: Dynamic Bass Boost

## Loudspeakers

- Main Speaker: 2 way
- Number of Loudspeakers: 2

## Video Playback

- Loader Type: Motorised
- Number of Discs: 1
- Playback Media: DVD, DVD+R/+RW, DVD-R/-RW, SVCD, Video CD, Picture CD
- Disc Playback Modes: Disc Menu, Fast Forward, Fast Backward, Slow Forward, Slow Backward, A-B Repeat, Angle, Zoom, Resume Playback from Stop
- DVD Region: 5

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Repeat/one/all/program, Repeat/one/disk/program, 20-Track Programmable
- Cassette Deck Technology: Mechanical
- Number of decks: 1
- Cassette Playback Modes: Automatic Stop, Electronic Speed Control

## Audio Recording

- Recording Media: Tape
- Tape Recording Enhancement: Automatic Recording Level, CD Synchro Start Recording

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW

## Connectivity

- Audio Connections: RCA Aux in, Analogue Audio Out (L/R)
- Other connections: Composite video (CVBS) out, Component Video out Interlaced, S-Video out, Digital output (cinch), Subwoofer out, Microphone socket, MW Antenna

## Convenience

- Display Type: LCD
- Karaoke: MIC volume, Key control, Echo control

## Accessories

- Remote control: 45-key
- Included Accessories: User Manual, Quick start guide, Composite video cable (Y), YPbPr component video cable, AM antenna
- Standard Package Includes: International Guarantee

## Dimensions

- Set dimensions (W x H x D): 337 x 86 x 436 mm
- Main speaker dimensions (W x H x D): 185 x 235 x 310 mm
- Packaging dimensions (W x H x D): 530 x 394 x 370 mm
- Weight incl. Packaging: 12 kg

## Power

- Power supply: 200-240 V, 50Hz

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Karaoke



The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allows you to choose the optimal key for your personal vocal range.