



Philips Streamium
Wi-Fi component Hi-Fi
system

Streamium



MCI730



Obsessed with sound

Stream music from PC/MAC and Internet - wirelessly

The Philips Streamium Wi-Fi component Hi-Fi system lets you stream music from your PC/MAC or play CD, MP3 or FM and Internet radio. Plus, enjoy easy navigation on its intuitive touch screen with color display.

Unlimited listening pleasure - wirelessly

- Wireless stream music and photos from your PC/MAC
- Thousands of free Internet Radio Stations
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Playback iTunes music
- FM radio

Easy navigation and control

- Remote control for handy navigation
- Touch screen for easy navigation

Quality sound performance

- 2x50W RMS Hi-Fi sound with Class "D" Digital Amplifier

Ready to connect

- Works with home broadband connection and Wi-Fi router

PHILIPS

Highlights

Free internet radio stations



Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kind of music worldwide. Connect your Streamium to the Internet and listen to your favorite online programs on your audio system without having to turn on your PC.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times


in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

Remote control



Control all your Philips Hi-Fi system's functions from the comfort of your sofa. Search, navigate and playback your music with ease and speed. With direct keys such as Home and Favorite, you can have quick access to your main screen, your favorite Internet station or stream music from your PC/MAC and Internet - wirelessly. The Hi-Fi control center is in the palm of your hand.

Touch screen

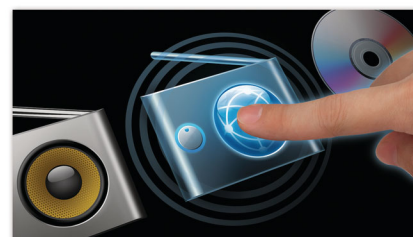

Touch screen control allows you to control your device by simply pressing on-screen buttons rather than physical buttons on the device. Simply power up the device and the touch screen user interface will show up on the LCD display with all the control options for the device. Touch screen control combines LCD display technology with pressure sensors and a powerful digital micro processor. When you press on a specific area of the screen with your finger, the relevant signal is sent to the processor and the command is immediately executed.

Specifications

Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A)
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Internet Radio
- Loader Type: Tray
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- USB Direct Modes: Play/Pause, Previous/Next, Stop
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play
- ID3-tag support
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192kbps, CBR/VBR

Sound

- Equalizer settings: Neutral, Jazz, Pop, Rock
- Sound Enhancement: Class "D" Digital Amplifier, Dynamic Bass Boost, Equalizer, Treble and Bass Control
- Volume Control: Volume Control up/down
- Output power (RMS): 2x50W

Loudspeakers

- Main Speaker: 2 way

Tuner/Reception/Transmission

- Auto digital tuning
- Tuner Bands: FM Stereo

Connectivity

- Other connections: Ethernet
- Headphone: 3.5 mm
- Wireless connection: Wireless LAN(802.11g), Wireless LAN(802.11b)
- Wireless Universal Plug & Play: Enabled
- LAN wired: Ethernet (RJ 45) 1x
- Encryption / security: WEP 128 bit, WEP 64 bit, WPA, WPA2, WPS-PBC, WPS-PIN
- Antenna: FM Dipole
- Audio Connections: Analogue Audio In (L/R),

- 3.5mm stereo line in -MP3 link
- Power: 220-240V

Convenience

- Display Type: LCD
- Backlight
- Backlight color: White
- On-Screen Display languages: English, Dutch, French, German, Italian, Spanish, Portuguese, Swedish
- Eco Power Standby: 1 watt
- Headphone jack
- Clock: On main display, Internet time
- Alarms: Buzzer Alarm, Sleep timer
- Display Enhancements: Brightness Control, Touch screen control
- Indications: DIM mode
- Remote control: 1-Way

Accessories

- Included accessories: AC Power Cord, FM antenna
- Batteries: 2x AAA
- CD-ROM: CD-ROM with Media Browser, Video Tutorial and manuals
- Quick start guide: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Remote control: 1-way Remote
- User Manual: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Warranty Card: Warranty Card

Dimensions

- Product dimensions (WxDxH): 245x255x168 mm
- Set weight: 8.6 kg

Picture/Display

- Diagonal screen size (inch): 3.5 inch

Power

- Power supply: 200-240 V, 50Hz



Issue date 2022-06-03

Version: 8.0.12

12 NC: 8670 000 58365
EAN: 87 12581 51768 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com