



Philips
Blu-ray SoundStage home
theater

2.1 CH Integrated subwoofer
Bluetooth® and NFC
HDMI ARC
Blu-ray Disc playback



HTB4152B



Everything you need to boost your TV's sound

The best TV companion

Place this SoundStage on top of your TV and pump up your home entertainment experience, connect one cable and start enjoying your movie and online services with Built-in WiFi, NFC for one touch Bluetooth pairing allows easy music listening.

Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI for high definition movies and picture quality

Designed for simplicity

- Perfect match with your TV, just place it on top
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Integrated subwoofer for powerful bass
- Dolby Digital and DTS for great surround sound

PHILIPS

Highlights

Built-in Wi-Fi


With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Virtual Surround Sound

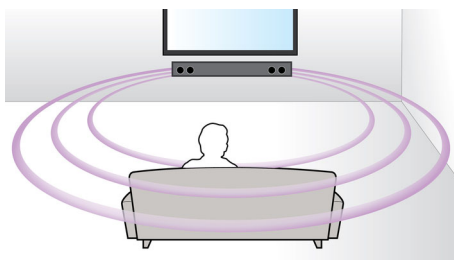

Philips Virtual Surround Sound produces rich and immersive surround sound from less than


five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.


Dolby Digital and DTS

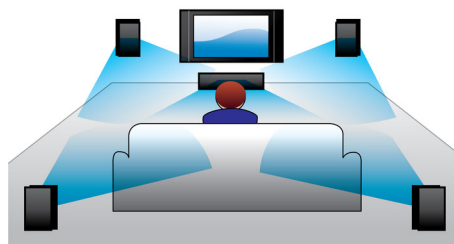

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos,

pumping it up so you get truly immersive surround sound out of your home cinema speaker.

Bluetooth wireless streaming

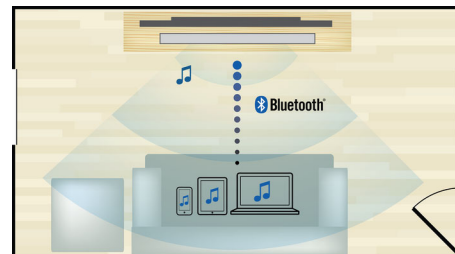

Bluetooth wireless music streaming from your music devices

NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual

Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

Connectivity

- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna
- Front / Side connections: Audio in, USB
- Integrated Connections: Wi-Fi, Bluetooth, NFC
- iPod/iPhone: via bluetooth, via 3.5mm Audio In

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Tweeter Impedance: 8 ohm
- Subwoofer type: Integrated subwoofer

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 40 W
- Standby power consumption: < 0.5 W
- Power supply: 50/60 Hz, 110-240V

Sound

- Sound Enhancement: Virtual Surround Sound, Treble, Mid and Bass Control, Night Mode
- Sound System: Dolby True HD, DTS Digital Surround
- Subwoofer output power: 40W
- Speaker output power: 20 W x 2
- Total Power RMS @ 10% THD: 80 W

Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM
- RDS: Station Name

Dimensions

- Main Unit (W x H x D): 701 x 70 x 317 mm
- Main Unit Weight: 6.8 kg
- Packaging (W x H x D): 840 x 135 x 176 mm
- Weight incl. Packaging: 11 kg

Packaging dimensions

- EAN: 87 12581 69988 8
- Packaging dimensions (W x H x D): 80 x 14.4 x 37.2 cm
- Gross weight: 9.13 kg
- Nett weight: 7.115 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.015 kg
- Type of shelf placement: Laying

Outer Carton

- EAN: 87 12581 69988 8
- Gross weight: 9.13 kg
- Outer carton (L x W x H): 80 x 37.2 x 14.4 cm
- Nett weight: 7.115 kg
- Number of consumer packagings: 1
- Tare weight: 2.015 kg

Product dimensions

- Product dimensions (W x H x D): 70.06 x 7.8 x 31 cm
- Weight: 6.82 kg



Issue date 2022-02-21

Version: 6.3.6

12 NC: 8670 001 07638
EAN: 87 12581 69988 8

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.

* DivX, DivX Certified, and associated logos are trademarks of
DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby
Laboratories Inc.